 




**Electrolux**

# 1. CABINET ASSEMBLY INSTRUCTIONS

 
## 1.1 Product range

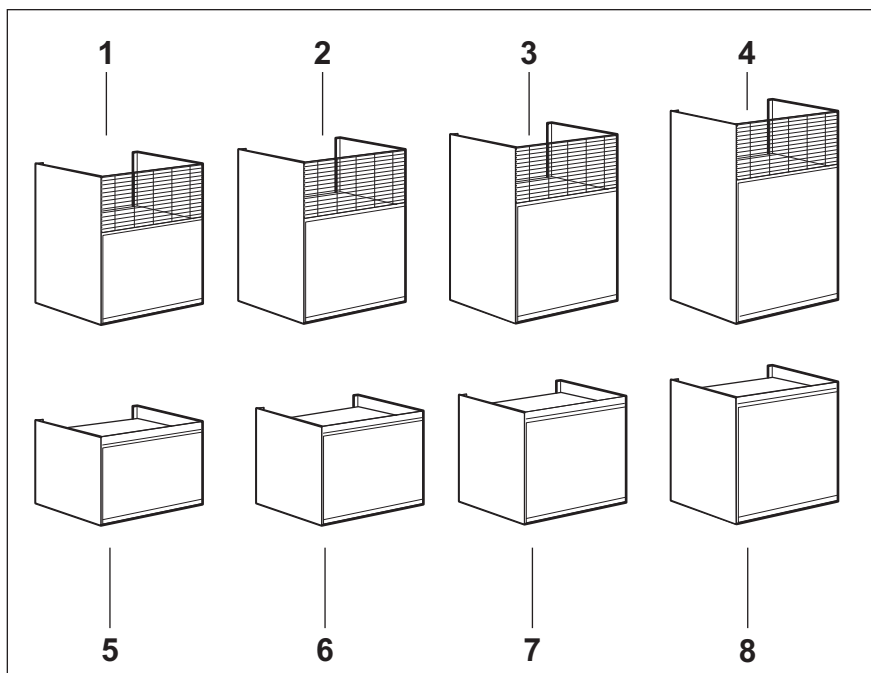

1. OT350 (height 380 - 650 mm)
2. OT450 (height 450 - 750 mm)
3. OT500 (height 500 - 800 mm)
4. OT700 (height 700 - 1000 mm)
5. O250 (height 250 mm)


6. O300 (height 300 mm)
7. O350 (height 350 mm)
8. O550 (height 550 mm)

### Components supplied

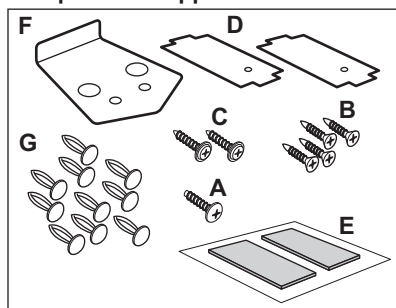

- A) Handle screw, 4 x 15 mm (1x)
- B) Steering screws, 4,2 x 13 mm (4x)
- C) Locking screw, 4,2 x 14 mm (2x)
- D) Assembly brackets (2x)
- E) Double-sided tape (2x)
- F) Handle (1x)
- G) Plastic rivets (10x) (only for OT models)

 Choose the door opening direction by turning the cupboard 180°.

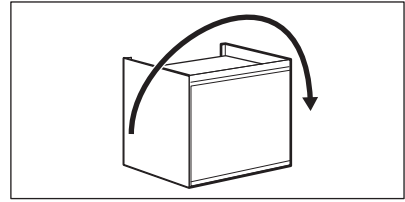


## 1.2 Installation

The assembly procedure depends on the type of your appliance. There are three types of installation:


1. Cabinets with the plastic top and hinge on the top.
2. Cabinets without the plastic top, with hinge and cover on the top.
3. Cabinets without the plastic top, without hinge and cover on the top.
 
### Type 1

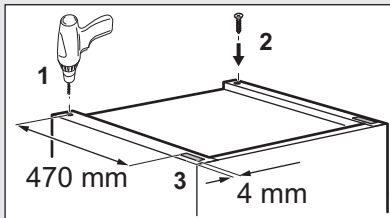


1. Drill 3,5 mm holes in the rear corners of the appliance on the pre-marked positions.
2. Screw the two steering screws in (B). Do not tight them fully.
3. Attach the double-sided tape (E) to one of the assembly brackets (D). Fasten the bracket to the plastic top of the appliance in the front, on the side without the hinge. Refer to the measurements on the picture. For extra security you may use the steering screw (B) to fix the bracket.

 
Turn the cupboard and place it on the appliance, to let the door open in the desired direction.

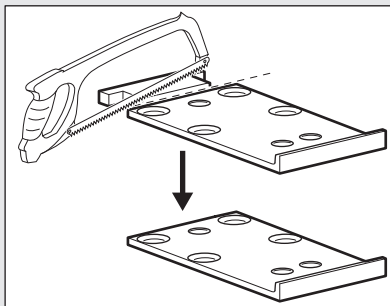

 Some models have a pre-assembled bracket in the front, on the side without the hinge. Dismantle it, cut the end carefully and fix the bracket again. For these models, additional assembly bracket (D) is not needed.

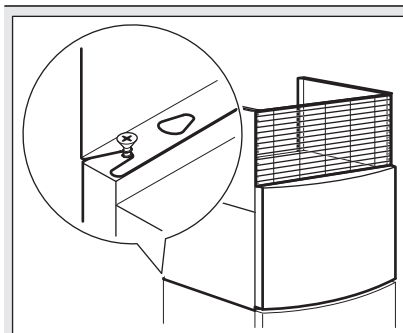


 Slide two steering screws into the cutouts on the bottom of the cupboard cabinet.

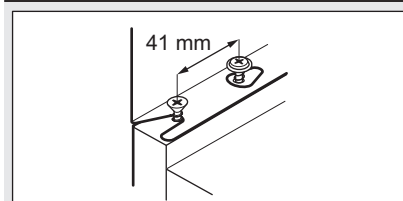


To secure the cabinet, fasten the two locking screws (C) directly into the plastic top through the drop-shaped holes.


## Type 2

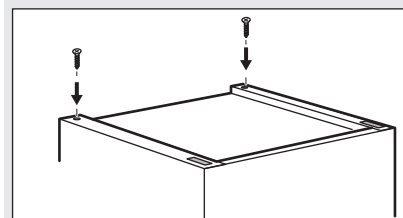 

 Screw the two steering screws into the existing holes in the back corners of the appliance. Do not tight them fully. Turn the cupboard and place it on the appliance, to let the door open in the desired direction.

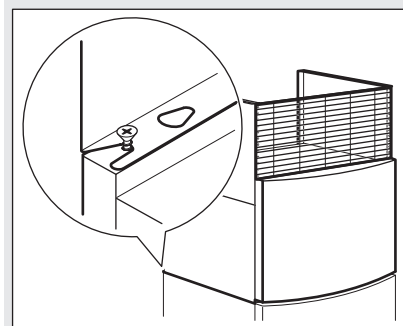


 Slide two steering screws (B) into the cutouts on the bottom of the cupboard cabinet.

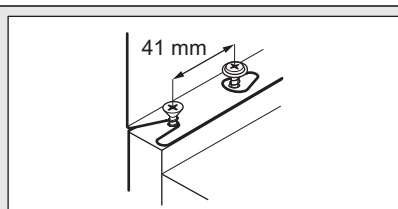


To secure the cabinet, fasten the two locking screws (C) directly into the plastic top through the drop-shaped holes.

### Type 3

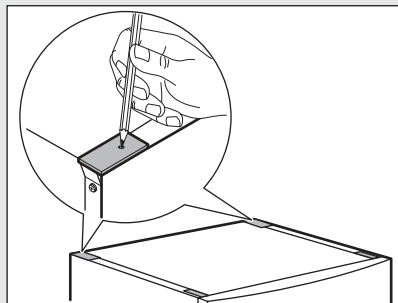 


 Place the assembly brackets (D) along the rear edge of the appliance and mark the positions of the holes. Remove the brackets and drill two 3,5 mm holes where marked.

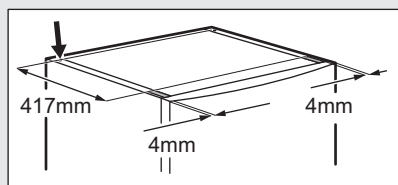


Attach the double-sided tapes (E) to the assembly brackets (D). Fasten the brackets to the top of the appliance in the front. Refer to the measurements on the picture.

 Turn the cupboard and place it on the appliance, to let the door open in the desired direction.

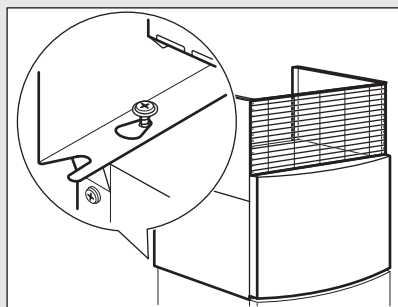

To secure the cabinet, screw the two locking screws (C) into the drilled holes.

## 1.3 Handle assembly

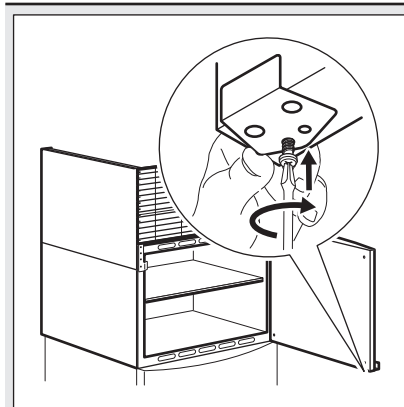 


Place the handle on the bottom of the door and fix it with the blunt screw (A).

## 1.4 Shelf assembly



 Only for models: O550, OT450, OT500, OT700.

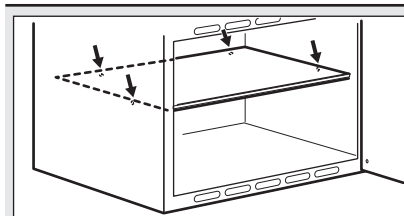


Hang the shelf on the four attachment points inside the cupboard. Make sure the shelf is properly positioned and stable.

## 1.5 Telescope walls assembly



 Only for models: OT350, OT450, OT500, OT700.

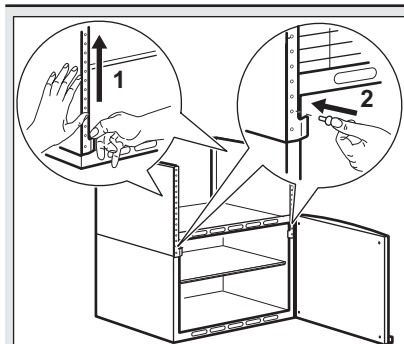


1. Slide the telescope walls upwards to desired height.
2. Fold the lower flap on each side and fix the plastic rivets (G).


## 1.6 Telescope front assembly



 
Only for models: OT350, OT450, OT500, OT700.

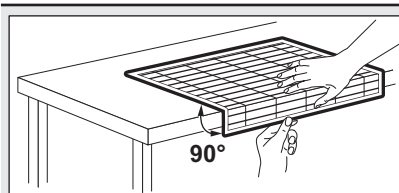

 Place the telescope front with the bended border upwards, towards the back of the cupboard. Adapt the height by folding the front 90° backwards.

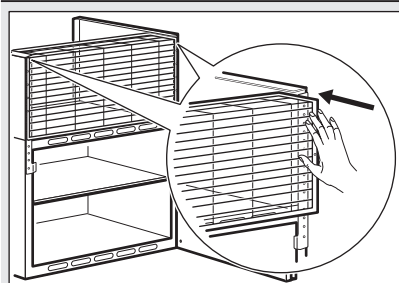

 Assemble the bended border backwards, below the upper edges of the telescope walls.

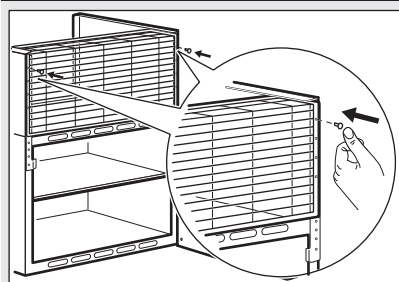


Fix the telescope front by pressing the plastic rivets into the front holes.


## 1.7 Care and cleaning



Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

## 2. ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances

marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

**electrolux.com/shop**



298377091-B-192015

