



HR	Perilica posuđa	Upute za uporabu	2
EN	Dishwasher	User Manual	27



SADRŽAJ

1. SIGURNOSNE INFORMACIJE.....	3
2. SIGURNOSNE UPUTE.....	4
3. OPIS PROIZVODA.....	6
4. UPRAVLJAČKA PLOČA.....	7
5. PROGRAMI.....	7
6. POSTAVKE.....	9
7. OPCIJE.....	12
8. PRIJE PRVE UPOTREBE.....	13
9. SVAKODNEVNA UPORABA.....	15
10. SAVJETI.....	18
11. ODRŽAVANJE I ČIŠĆENJE.....	19
12. RJEŠAVANJE PROBLEMA.....	22
13. TEHNIČKI PODACI.....	25

MISLIMO NA VAS

Hvala vam što ste kupili Electrolux uređaj. Izabrali ste proizvod koji sa sobom donosi desetljeća profesionalnog iskustva i inovacija. Domišljat i elegantan, projektiran je misleći na vas. Stoga, uvijek kada ga koristite, možete biti sigurni znajući da ćete svaki put dobiti izvrsne rezultate.

Dobrodošli u Electrolux.

Posjetite našu internetsku stranicu za:



Dobivanje savjeta o korištenju, rješavanje problema, brošure i servisne informacije:

www.electrolux.com/webselfservice



Registriranje vašeg proizvoda za bolji servis:

www.registerelectrolux.com



Kupujte dodatnu opremu, potrošni materijal i originalne rezervne dijelove za svoj uređaj:

www.electrolux.com/shop

BRIGA O KUPCIMA I SERVIS

Preporučujemo uporabu originalnih rezervnih dijelova.

Prilikom kontaktiranja ovlaštenog servisnog centra, provjerite da su vam dostupni sljedeći podaci: Model, PNC, serijski broj.

Informacije možete pronaći na natpisnoj pločici.

 Upozorenje / Oprez - sigurnosne informacije

 Opće informacije i savjeti

 Ekološke informacije

Zadržava se pravo na izmjene.

1. ⚠ SIGURNOSNE INFORMACIJE

Prije postavljanja i korištenja uređaja pažljivo pročitajte isporučene upute. Proizvođač nije odgovoran za bilo kakvu ozljedu ili oštećenje koji su rezultat neispravnog postavljanja ili korištenja. Upute uvijek držite na sigurnom i pristupačnom mjestu za buduću upotrebu.

1.1 Sigurnost djece i osjetljivih osoba

- Ovaj uređaj mogu koristiti djeca od 8 godina pa na više i osobe smanjenih tjelesnih, osjetilnih ili mentalnih mogućnosti ili osobe koje ne raspolažu iskustvom ili znanjem ako su pod nadzorom osobe odgovorne za njihovu sigurnost i rade po uputama koje se odnose na sigurno korištenje uređaja te razumiju uključene opasnosti.
- Djeca između 3 i 8 godina starosti i osobe s velikim i složenim invaliditetom trebaju se držati podalje, osim ako su pod stalnim nadzorom.
- Djeca mlađa od 3 godine trebaju se držati podalje ako nisu pod trajnim nadzorom.
- Ne dozvolite djeci da se igraju s uređajem.
- Deterdžente čuvajte izvan dohvata djece.
- Djecu i kućne ljubimce držite podalje od uređaja dok su vrata uređaja otvorena.
- Bez nadzora djeca ne smiju čistiti uređaj i provoditi održavanje koje izvršava korisnik.

1.2 Opća sigurnost

- Ovaj uređaj namijenjen je za upotrebu u kućanstvu i za slične namjene kao što su:
 - farme, čajne kuhinje koje upotrebljavaju zaposleni u prodavaonicama, uredima i drugim radnim prostorima;
 - klijenti u hotela, motela, bed&breakfast ustanova i drugih vrsta smještaja.
- Ne mijenjajte specifikacije ovog uređaja.

- Radni tlak vode (minimalni i maksimalni) mora biti između 0.5 (0.05) / 8 (0.8) bar (MPa)
- Pridržavajte se postavke maksimalnog broja od 13 mjesta.
- Ako je kabel za napajanje oštećen, proizvođač ili ovlašteni servisni centar ili slična kvalificirana osoba mora ga zamijeniti kako bi se izbjegla opasnost.
- Pribor za jelo stavite u košaru za pribor za jelo s oštrim rubovima okrenutom prema dolje, ili ga stavite u ladicu za pribor za jelo u vodoravan položaj s oštrim rubovima okrenutim prema dolje.
- Ne ostavljajte uređaj s otvorenim vratima bez nadzora kako biste izbjegli da ih slučajno nagazite.
- Prije održavanja uređaj isključite, a utikač izvadite iz utičnice električnog napajanja.
- Za čišćenje uređaja ne koristite prskalice vode i/ili pare pod tlakom.
- Ako uređaj ima ventilacijske otvore na dnu, oni se ne smiju pokrivati, npr. tepihom.
- Uređaj se treba priključiti na vodovodnu mrežu pomoću isporučenog novog kompleta cijevi. Stari komplet cijevi ne smije se ponovno upotrijebiti.

2. SIGURNOSNE UPUTE

2.1 Postavljanje



UPOZORENJE!

Samo kvalificirana osoba smije postaviti ovaj uređaj.

- Odstranite svu ambalažu.
- Ne postavljajte i ne koristite oštećeni uređaj.
- Uređaj nemojte postavljati na mjesta na kojima je temperatura manja od 0°C.
- Pridržavajte se uputa za ugradnju koje su priložene uređaju.
- Prilikom pomicanja uređaja uvijek budite pažljivi jer je uređaj težak. Uvijek nosite zaštitne rukavice i zatvorenu obuću.
- Provjerite je li uređaj postavljen ispod i blizu sigurnih konstrukcija.

2.2 Spajanje na električnu mrežu



UPOZORENJE!


Opasnost od požara i strujnog udara.

- Uređaj mora biti uzemljen.
- Uvjerite se da su parametri na natpisnoj pločici kompatibilni s električnim detaljima napajanja.
- Uvijek koristite pravilno ugrađenu utičnicu sa zaštitom od strujnog udara.
- Ne koristite višeputne utikače i produžne kabele.
- Pazite da ne oštetite utikač i kabel napajanja. Ako je potrebno zamijeniti električni kabel, to mora izvršiti ovlašteni servisni centar.

- Utikač kabela napajanja utaknite u utičnicu tek po završetku postavljanja. Provjerite postoji li pristup utikaču nakon postavljanja.
- Ne povlačite kabel napajanja kako biste izvukli utikač iz utičnice. Uvijek uhvatite i povucite utikač.
- Ovaj je uređaj usklađen s direktivama EEZ-a.
- Samo Velika Britanija i Irska. Ovaj uređaj opremljen je kabelom napajanja od 13 A. Ako je potrebno zamijeniti osigurač električnog utikača, upotrijebite osigurač ASTA (BS 1362) od 13 A.

2.3 Spajanje na dovod vode

- Ne oštećujte crijeva za vodu.
- Prije priključka na nove cijevi, cijevi koje dugo nisu korištene, nakon popravka ili instalacije novih uređaja (mjerila itd.), pustite da voda teče dok nije čista i bistra.
- Provjerite da nema vidljivih curenja tijekom i nakon prve uporabe uređaja.
- Crijevo za dovod vode ima sigurnosni ventil i oblogu s unutarnjim električnim kabelom.

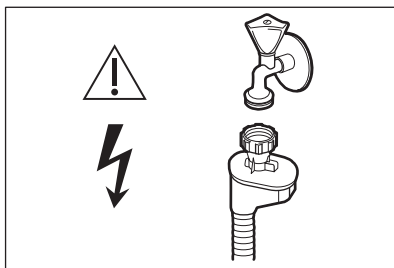

UPOZORENJE!

Opasan napon.

- Ako je crijevo za dovod vode oštećeno, odmah zatvorite slavinu za vodu iskopčajte utikač iz strujne utičnice. Za zamjenu crijeva za dovod vode kontaktirajte ovlašteni servisni centar.

2.4 Upotreba

- Ne sjedajte i ne stojte na otvorenim vratima.

- Deterdženti za perilicu posuđa su opasni. Pridržavajte se sigurnosnih uputa na ambalaži deterdženta.
- Ne pijte i ne igrajte se s vodom u uređaju.
- Ne vadite posuđe iz uređaja prije završetka programa. Neki deterdženti mogu ostati na posuđu.
- Uređaj može ispuštati vruću paru ako otvorite vrata dok je program u tijeku.
- Ne stavljajte zapaljive predmete ili predmete namočene zapaljivim sredstvima u, pored ili na uređaj.

2.5 Unutarnja rasvjeta



UPOZORENJE!

Opasnost od ozljede.

- Ovaj uređaj ima unutarnju žaruljicu koja se uključuje kad otvorite vrata i isključuje kad ih zatvorite.
- Vrsta žarulje u ovom uređaju, namijenjeno samo za kućanske uređaje. Ne koristite ga za kućno osvjetljenje.
- Za zamjenu unutarnje žaruljice obratite se ovlaštenom servisu.

2.6 Servisiranje

- Za popravak uređaja kontaktirajte ovlašteni servis.
- Koristite samo originalne rezervne dijelove.

2.7 Odlaganje




UPOZORENJE!

Opasnost od ozljede ili gušenja.

- Uređaj isključite iz električne mreže.
- Prerežite električni kabel i bacite ga.
- Uklonite bravicu vrata kako biste spriječili da se djeca i kućni ljubimci zatvore u uređaj.

3. OPIS PROIZVODA

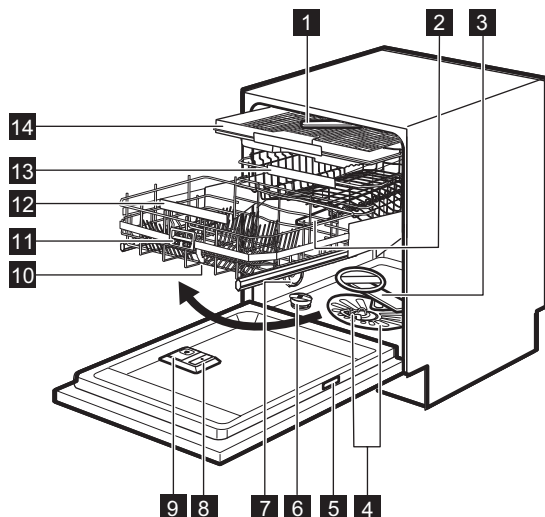


- | | |
|---|------------------------------------|
| 1 Glavna mlaznica | 9 Spremnik deterdženta |
| 2 Gornja mlaznica | 10 Comfort Lift košara |
| 3 Donja mlaznica | 11 Ručica brave |
| 4 Filtri | 12 Ručica donje košare |
| 5 Natpisna pločica | 13 Gornja košara |
| 6 Spremnik soli | 14 Ladica za pribor za jelo |
| 7 Ventilacijski otvor | |
| 8 Spremnik sredstva za ispiranje | |

3.1 TimeBeam


TimeBeam prikazuje sljedeće informacije na podu ispod vrata uređaja:

- Trajanje programa kad program započne.
- **0:00 i CLEAN** kad je program završen.
- **DELAY** i odbrojanje trajanja kad započne odgodu početka.
- Šifru alarma u slučaju neispravnog rada uređaja.

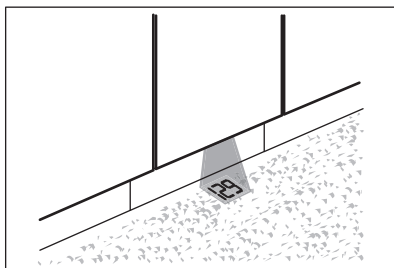

- i** Kad je tijekom faze sušenja uključeno AirDry projekcija na podu možda neće biti potpuno vidljiva. Za provjeru preostalog vremena trajanja programa, pogledajte na zaslon na upravljačkoj ploči.

4. UPRAVLJAČKA PLOČA

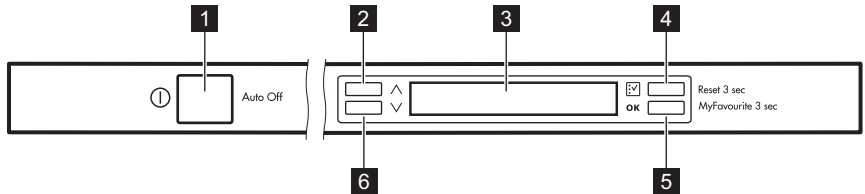

- 1** Tipka za uključivanje/isključivanje
- 2** Navigacijska tipka (gore)
- 3** Prikaz
- 4** tipka **Options**
- 5** tipka **OK**
- 6** Navigacijska tipka (dolje)

4.1 Ponašanje tipki

Navigacijske tipke (gore i dolje)

- Koristite te tipke za listanje popisa i informativnih tekstova na zaslonu.

tipka **Options**

- Kratkim pritiskom otvara se popis opcija.
- Kratki pritisak u popisu opcija za vraćanje natrag na popis programa.
- Kratki pritisak u popisu postavki za vraćanje na popis opcija.
- Dugi pritisak (3 s) tijekom trajanja odgode početka ili programa poništiti

će odgodu početka, program i opcije. Na zaslonu se prikazuje osnovni program: ECO 50°.

tipka **OK**

- Kratki pritisak za potvrdu odabira programa, opcija i postavki.
- Dugi pritisak (3 sek.) za pokretanje programa MyFavourite. Ako nijedan program nije spremljen, na zaslonu se prikazuje: **Post. MyFavourite**.

5. PROGRAMI

Program	Stupanj zaprljanosti Vrsta rublja	Faze programa	Opcije
ECO 50° 1)	• Normalno zaprljano • Posuđe i pribor za jelo	• Predpranje • Pranje 50 °C • Ispiranja • Sušenje	• XtraDry

Program	Stupanj zaprljanosti Vrsta rublja	Faze programa	Opcije
AutoFlex 45°-70° 2)	• Sve • Posuđe, pribor za jelo, tave i posude	• Predpranje • Pranje od 45 °C do 70 °C • Ispiranja • Sušenje	• XtraDry
FlexiWash 50°-65° 3)	• Miješano zaprljano • Posuđe, pribor za jelo, tave i posude	• Predpranje • Pranje 50 °C i 65 °C • Ispiranja • Sušenje	• TimeManager • XtraDry
Intensive 70° 4)	• Jako zaprljano • Posuđe, pribor za jelo, tave i posude	• Predpranje • Pranje 70 °C • Ispiranja • Sušenje	• TimeManager • XtraDry
Quick Plus 60° 5)	• Svježije zaprljano posuđe • Posuđe i pribor za jelo	• Pranje 60 °C • Ispiranja	• XtraDry
Glass Care 45°6)	• Normalno ili lagano zaprljano • Osjetljivo i stakleno posuđe	• Pranje 45 °C • Ispiranja • Sušenje	• XtraDry
Rinse & Hold 7)	• Sve	• Predpranje	

1) Ovaj program nudi najučinkovitije iskorištavanje vode i štednju energije za uobičajeno zaprljano posuđe i pribor za jelo. Ovo je standardni program za ustanove za testiranje.

2) Uređaj prepoznaje stupanj zaprljanosti i količinu predmeta u košarama. Automatski prilagođava temperaturu i količinu vode, kao i trajanje programa.

3) Ovim programom možete prati mješovito zaprljano posuđe. Jako zaprljane predmete stavite u donju košaru a normalno zaprljano u gornju. Tlak i temperatura vode u donjoj košari viši su nego u gornjoj košari.

4) Ovaj program napravljen je za pranje jako zaprljanih predmeta s visokim tlakom vode i pri visokoj temperaturi.

5) Taj program prikladan je za kratko pranje cijelog ili polovice punjenja s lagano ili normalno zaprljanim rubljem.

6) Ovaj program kontrolira temperaturu vode kako bi se pružila posebna njega osjetljivih predmeta, poglavito čaša.

7) S ovim programom možete brzo isprati sve ostatke hrane s posuđa i spriječiti stvaranje mirisa u uređaju. Uz ovaj program nemojte koristiti deterdžent.

5.1 Podaci o potrošnji

Program ¹⁾	Razina (l)	Energija (kWh)	Trajanje (min)
ECO 50°	11	0.832	235
AutoFlex 45°-70°	8 - 15	0.7 - 1.7	46 - 170
FlexiWash 50°-65°	14 - 16	1.2 - 1.5	160 - 180
Intensive 70°	12.5 - 14.5	1.4 - 1.7	170 - 190
Quick Plus 60°	10	0.9	30
Glass Care 45°	12 - 14	0.8 - 1.0	82 - 92
Rinse & Hold	4	0.1	14

¹⁾ Tlak i temperatura vode, oscilacije u napajanju električne mreže, opcije te količina posuđa mogu promijeniti vrijednosti.

5.2 Informacije za ustanove za testiranje

Kako biste primili potrebne informacije o provedbi testova značajki (npr. u skladu s EN60436), pošaljite poruku elektroničke pošte na:

info.test@dishwasher-production.com

U vašem zahtjevu priložite broj proizvoda (PNC) s natpisne pločice.

Za sva druga pitanja u vezi vaše perilice posuđa pogledajte servisnu knjižicu isporučenu s vašim uređajem.

6. POSTAVKE

6.1 Popis postavki

Postavke uređaja	Vrijednosti	Zaslon
Post. MyFavourite	Popis programa	Postavite vaš omiljeni dnevni program. Pogledajte odgovarajuće informacije u poglavlju.
AirDry	UKLJ. ISKLJ.	Postavite automatsko otvaranje vrata tijekom faze sušenja. Pogledajte odgovarajuće informacije u poglavlju. Tvorničke postavke: UKLJ..
Zvučni signal završetka	UKLJ. ISKLJ.	Postavite zvučni signal koji se oglašava po završetku programa. Tvorničke postavke: IS- KLJ..

Postavke uređaja	Vrijednosti	Zaslon
Ton tipke	Klik Bip Isklj.	Postavite zvuk tipki kad su pritisnute.
Glasnoća zvuka	Od razine 1 do razine 10.	Podešavanje jačine zvuka.
Osvjetljenje	Od razine 0 do razine 9.	Podešavanje osvjetljenja zaslona.
Kontrast	Od razine 0 do razine 9.	Podešavanje kontrasta zaslona.
Tvrdoća vode	Od razine 1 do razine 10.	Podesite razinu omekšivača vode u skladu s tvrdoćom vode u vašem području. Tvorničke postavke: razina 5.
Raz. sredstva ispiranje	Od razine 0 do razine 6. Razina 0 = bez ispuštanja sredstva za ispiranje	Podesite količinu ispuštenog sredstva za ispiranje u skladu s potrebnim doziranjem. Tvorničke postavke: razina 4.
Jezici	Popis jezika	Postavite željeni jezik. Osnovni jezik: Engleski.
Prikaz na podu	Popis boja Nema odabira	Postavite boju TimeBeam ili isključite TimeBeam.
Resetirajte postavke	Poništi	Vraća uređaj na tvorničke postavke.

6.2 Kako promijeniti postavku s 2 vrijednosti (UKLJ. i ISKLJ.)

Spremljene postavke važe dok ih ponovno ne promijenite.

1. Pritisnite .
Na zaslonu se prikazuje popis opcija.
2. Odaberite **Postavke uređaja** i pritisnite **OK**.
Na zaslonu se prikazuje popis postavki.
3. Odaberite postavku i pritisnite **OK** za promjenu vrijednosti postavke.
 - Vrijednost postavke mijenja se iz **UKLJ.** u **ISKLJ.** ili obrnuto.
 - Na zaslonu ostaje prikazan popis postavki.

4. Pritišćite  dok se na zaslonu ne prikaže popis programa.

6.3 Kako promijeniti postavku s višestrukim vrijednostima

Spremljene postavke važe dok ih ponovno ne promijenite.

1. Pritisnite .
Na zaslonu se prikazuje popis opcija.
2. Odaberite **Postavke uređaja** i pritisnite **OK**.
Na zaslonu se prikazuje popis postavki.
3. Odaberite postavku i pritisnite **OK** za ulazak u postavku.

4. Koristite $\wedge$ i $\vee$ za promjenu vrijednosti postavke.
5. Pritisnite **OK** za spremanje postavke.
Zaslon se vraća na popis postavki.
6. Pritišćite $\boxed{\vee}$ dok se na zaslonu ne prikaže popis programa.

6.4 Kako spremiti MyFavourite program

Vaš omiljeni program možete spremiti zajedno s primjenjivim opcijama. Nije moguće spremiti program MyFavourite s opcijom Odgoda.


Istovremeno možete spremiti samo jedan program. Nova postavka poništava prethodnu.

1. Pritisnite $\boxed{\vee}$.
Na zaslonu se prikazuje popis opcija.
2. Odaberite **Postavke uređaja** i pritisnite **OK**.
Na zaslonu se prikazuje popis postavki.
3. Odaberite **Post. MyFavourite** i pritisnite **OK**.
Na zaslonu se prikazuje popis programa.
4. Odaberite program i pritisnite **OK**.
Na zaslonu se prikazuju dvije vrijednosti.
 - **Dodaj opciju:** odaberite vrijednost za dodavanje opcije programu.
 - **Izvršeno:** odaberite vrijednost za spremanje programa bez opcija ili za završetak dodavanja opcija programu.
5. Pritisnite **OK**.
Ako je program primjenjiv na opciju TimeManager na zaslonu će se prikazati dvije vrijednosti s odgovarajućim trajanjima programa.
 - **Brzo:** odaberite vrijednost za uključenje TimeManager.
 - **Uobičajeno:** odaberite vrijednost za isključenje TimeManager.
6. Za potvrdu pritisnite **OK**.

Na zaslonu se potvrđuje da je program MyFavourite spremljen.

6.5 AirDry

Opcija AirDry poboljšava rezultate sušenja uz manju potrošnju energije.

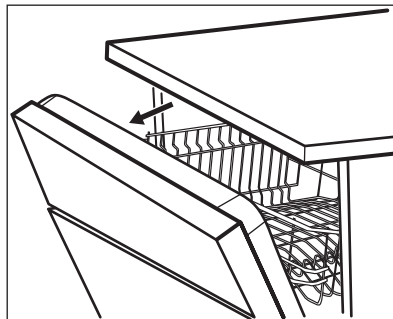

Tijekom faze sušenja, vrata se automatski otvaraju i ostaju pritrvorena.



OPREZ!

Ne pokušavajte zatvoriti vrata uređaja tijekom 2 minute nakon automatskog otvaranja. To može prouzročiti oštećenja uređaja.

Ako se nakon toga vrata zatvore na još 3 minute, program koji u tijeku prekida se.

AirDry se automatski uključuje sa svim programima osim s Rinse & Hold (ako je primjenjivo).

Da biste povećali učinkovitost sušenja, pogledajte opciju XtraDry ili aktivirajte AirDry.



OPREZ!

Ako djeca imaju pristup uređaju, preporučuje se isključiti AirDry jer otvaranje vrata može predstavljati opasnost.

7. OPCIJE



Željene opcije moraju se aktivirati svaki put prije početka programa. Nije moguće uključiti ili isključiti opcije dok je program u tijeku.



Uključenje opcija može utjecati na potrošnju vode i električne energije, kao i na trajanje programa.

7.1 Popis opcija

Opcije	Vrijednosti	Zaslon
Odgoda	Od 1 do 24 sata ISKLJ. (osnovna vrijednost)	Odgode početka programa.
XtraDry	UKLJ. ISKLJ. (osnovna vrijednost)	Pojačava značajke sušenja. Pogledajte odgovarajuće informacije u poglavlju.
TimeManager	Brzo Uobič. (osnovna vrijednost)	Smanjuje trajanje odabranog programa za otprilike 50%. Pogledajte odgovarajuće informacije u poglavlju.
Postavke uređaja		Prikazuje postavke uređaja.

7.2 Način postavljanja opcije

Popis opcija prikazuje samo opcije koje su primjenjive na odabrani program.

Nisu sve opcije međusobno kompatibilne. Ako ste odabrali nekompatibilne opcije, uređaj će automatski isključiti jednu ili više njih. Zaslon vas informira koje opcije su isključene.

Kad program završi ili se poništi, opcije se postavljaju na osnovne vrijednosti.

1. Odaberite program.

2. Pritisnite .

Na zaslonu se prikazuju primjenjive opcije.

3. Odaberite opciju.

Zaslon prikazuje osnovnu vrijednost opcije navedenu u zagradama.

4. Pritisnite **OK** za promjenu vrijednosti iz **ISKLJ.** u **UKLJ.** ili obrnuto.

Ako odaberete **Odgoda** i pritisnete **OK**, na zaslonu se prikazuje broj sati dostupnih za odgođeno pokretanje. Odaberite željeno vrijeme odgode i pritisnite **OK** za potvrdu.

5. Pritišćite  dok se na zaslonu ne prikaže odabrani program.

7.3 XtraDry

Uključite opciju za pojačanje značajki sušenja.

XtraDry je trajna opcija za sve programe osim ECO 50°. Automatski se uključuje u sljedećim ciklusima. Ta konfiguracija može se u svakom trenutku promijeniti.



Svaki put kad se aktivira ECO 50°, XtraDry je isključeno i mora se odabrati ručno.

Uključenje opcije XtraDry isključuje TimeManager i obratno.

7.4 TimeManager

TimeManager omogućava smanjenje trajanja odabranog programa za otprilike 50%.

Ova opcija povećava tlak i temperaturu vode. Faze pranja i sušenja su kraće.

Rezultati programa su isti kao i kod uobičajenog trajanja programa. Rezultati sušenja mogu se smanjiti.

Uključite TimeManager na sljedeći način:

Odaberite program i pritisnite **OK**.

Ako je TimeManager primjenjiv na odabrani program, na zaslonu se prikazuju dvije vrijednosti koje odgovaraju trajanjima programa.

- **Brzo**: odaberite vrijednost za uključanje TimeManager i pritisnite **OK** za potvrdu.
- **Uobičaj.**: odaberite vrijednost za isključanje TimeManager i pritisnite **OK** za potvrdu.

Uključanje opcije TimeManager isključuje XtraDry i obratno.

8. PRIJE PRVE UPOTREBE

Kad prvi put uključite uređaj, morate postaviti jezik. Osnovni jezik je engleski.

1. Postavite jezik.
 - Pritisnite **OK** za potvrdu engleskog jezika.
 - Odaberite drugi jezik i za potvrdu pritisnite **OK**.
2. **Provjerite odgovara li trenutna postavka omekšivača vode tvrdoći vode. Ako nije, prilagodite razinu omekšivača vode.**
3. Napunite spremnik za sol.
4. Napunite spremnik sredstva za ispiranje.
5. Otvorite slavinu.
6. Pokrenite program za uklanjanje bilo kakve ostatke iz postupka proizvodnje. Ne koristite deterdžent i ne stavljajte posude u košare.

Nakon pokretanja programa, uređaj puni smolu u omekšivač vode, do 5 minuta.

Faza pranja započinje tek kada se ovaj postupak dovrši. Postupak se periodički ponavlja.

8.1 Omekšivač vode

Omekšivač vode uklanja minerale iz vode koji bi imali negativan utjecaj na rezultate pranja i na uređaj.

Što je više tih minerala, to je voda tvrđa. Tvrdoća vode mjeri se sljedećim ekvivalentnim ljestvicama.

Omekšivač vode treba podesiti u skladu s tvrdoćom vode na vašem području. Podatke možete dobiti od lokalnog vodoopskrbnog poduzeća. Važno je postaviti ispravnu razinu omekšivača vode kako bi se osigurali dobri rezultati pranja.

Tvrdoća vode

Njemački stupnjevi (°dH)	Francuski stupnjevi (°fH)	mmol/l	Clarke stupnjevi	Razina omekšivača vode
47 - 50	84 - 90	8.4 - 9.0	58 - 63	10
43 - 46	76 - 83	7.6 - 8.3	53 - 57	9
37 - 42	65 - 75	6.5 - 7.5	46 - 52	8
29 - 36	51 - 64	5.1 - 6.4	36 - 45	7
23 - 28	40 - 50	4.0 - 5.0	28 - 35	6

Njemački stupnjevi (°dH)	Francuski stupnjevi (°fH)	mmol/l	Clarke stupnjevi	Razina omekšivača vode
19 - 22	33 - 39	3.3 - 3.9	23 - 27	5 ¹⁾
15 - 18	26 - 32	2.6 - 3.2	18 - 22	4
11 - 14	19 - 25	1.9 - 2.5	13 - 17	3
4 - 10	7 - 18	0.7 - 1.8	5 - 12	2
<4	<7	<0.7	< 5	1 ²⁾

1) Tvorničke postavke.

2) Nemojte koristiti sol na ovoj razini.

Neovisno o vrsti korištenog deterdženta, postavite odgovarajuću tvrdoću vode kako biste održavali obavijest dopunjevanja soli aktivnom.



Višenamjenske tablete koje sadrže sol nisu dovoljno učinkovite za omekšavanje tvrde vode.

8.2 Spremnik za sol



OPREZ!

Koristite samo grubu sol namijenjenu za perilice posuđa. Fina sol povećava rizik od korozije.


Sol se koristi za nadopunu smole u omekšivač vode te kako bi se osigurali dobri rezultati pranja u svakodnevnoj uporabi.

Kako puniti spremnik za sol




Uvjerite se da je Comfort Lift košara prazna i zaključana u gornjem položaju.

1. Okrenite poklopac spremnika za sol u smjeru suprotnom od smjera kazaljke na satu i skinite ga.
2. Stavite 1 litru vode u spremnik za sol (samo prvi put).
3. Spremnik za sol napunite solju za perilicu posuđa (dok se ne napuni).

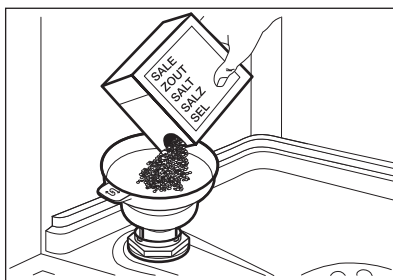

4. Pažljivo protresite cijev za ručicu, da zrnca uđu unutra.
5. Uklonite sol oko otvora spremnika soli.

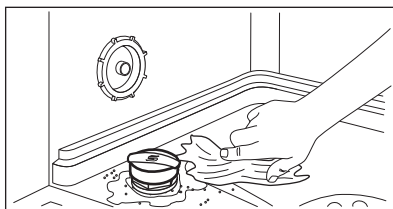

6. Okrenite čep spremnika za sol u smjeru kazaljke na satu kako biste ga zatvorili.



OPREZ!

Voda i sol mogu izlaziti iz spremnika za sol tijekom punjenja. Nakon što napunite spremnik za sol odmah pokrenite program kako biste spriječili koroziju.




Kad spremnik za sol treba napuniti, na zaslonu se prikazuje odgovarajuća poruka:

8.3 Spremnik sredstva za ispiranje

Sredstvo za ispiranje pomaže u sušenju posuđa bez mrlja i pruga.

Sredstvo za ispiranje automatski se ispušta tijekom faze vrućeg ispiranja.

Kako napuniti spremnik sredstva za ispiranje

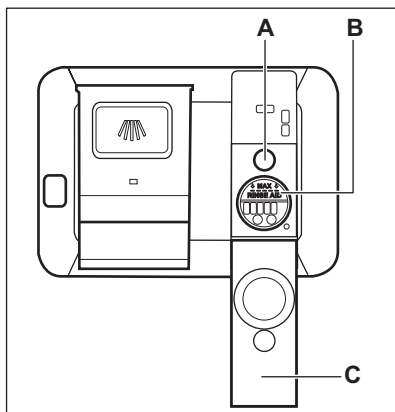

OPREZ!

Koristite isključivo sredstva za ispiranje posebno napravljena za perilice posuđa.

1. Otvorite poklopac (C).
2. Napunite spremnik (B) dok sredstvo za ispiranje ne dosegne oznaku "MAX".
3. Proliveno sredstvo za ispiranje uklonite upijajućom krpom kako biste spriječili stvaranje prevelike količine pjene.
4. Zatvorite poklopac. Provjerite da se poklopac zaključava na mjestu.



Kada indikator (A) postane proziran, napunite spremnik sredstva za ispiranje.



Kad spremnik sredstva za ispiranje treba nadopuniti, na zaslonu se prikazuje odgovarajuća poruka.

Ako koristite višenamjenske tablete i rezultati sušenja su zadovoljavajući, poruka za nadopunu sredstva za ispiranje može se isključiti postavljanjem razine sredstva za ispiranje na 0.



Preporučujemo da uvijek koristite sredstvo za ispiranja, za bolje rezultate sušenja, također i u kombinaciji s višenamjenskim tabletama koje sadrže sredstvo za ispiranje.

9. SVAKODNEVNA UPORABA

1. Otvorite slavinu.
2. Za uključivanje uređaja pritisnite tipku za uključivanje/isključivanje.
 - Ako se na zaslonu prikazuje odgovarajuća poruka, napunite spremnik za sol.
 - Ako se na zaslonu prikazuje odgovarajuća poruka, napunite spremnik sredstva za ispiranje..
3. Napunite košare.
4. Dodajte deterdžent.
5. Postavite i pokrenite odgovarajući program koji odgovara vrsti i zaprljanosti punjenja.

9.1 Comfort Lift



OPREZ!

Ne sjedite na okviru i ne opterećujte previše zaključanu košaru.

**OPREZ!**

Ne prelazite maks. kapacitet od 18 kg.


**OPREZ!**

Uvjerite se da predmeti ne vide iz okvira košare jer mogu oštetiti predmete i Comfort Lift mehanizam.

Comfort Lift mehanizam omogućuje podizanje (na razinu gornjeg okvira) i spuštanje donjeg okvira za lakše punjenje i pražnjenje posuđa.


Za punjenje i pražnjenje donje košare:

1. Podignite košaru povlačeći okvir iz perlice posuđa za ručku košare. Ne smije se koristiti ručica brave.

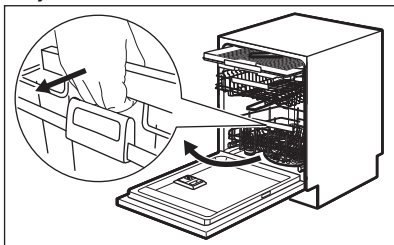

Košara se automatski zaključava na gornjoj razini.

2. Pažljivo stavite predmete u košaru ili ih izvadite (pogledajte **Letak za punjenje košare**).
3. Spustite košaru spajajući ručicu brave s okvirom košare, kako je prikazano ispod. Potpuno podignite ručicu brave i ručicu košare, dok se košara ne otklači s obje strane.

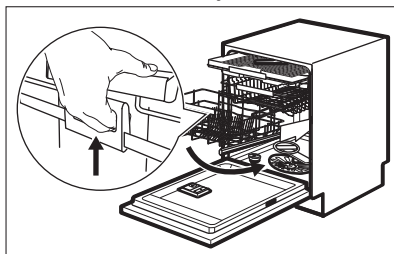


Kad je košara otključana, gurnite okvir prema dolje. Mehanizam se

vraća u osnovni položaj na donjoj razini.

Postoje dva načina spuštanja mehanizma, ovisno o punjenju:

- Ako je napunjeno cijelo punjenje tanjura, lagano gurnite košaru prema dolje.
- Ako je košara prazna ili polupuna, pritisnite košaru prema dolje.

9.2 Upotreba deterdženta

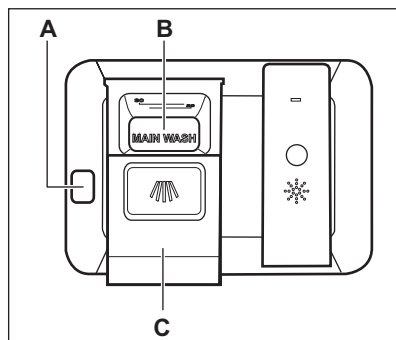**OPREZ!**

Upotrebljavajte samo sredstva za pranje napravljena za perlice posuđa.

1. Pritisnite tipku (A) za otvaranje poklopca (C).
2. Stavite deterdžent u prašku ili tablete u odjeljak (B).
3. Ako program ima fazu omekšavanja, stavite malu količinu deterdženta u unutarnji dio vrata uređaja.
4. Zatvorite poklopac. Provjerite da se poklopac zaključava na mjestu.

9.3 Odabir i pokretanje programa

Način pokretanja programa

1. Za uključivanje uređaja pritisnite tipku za uključivanje/isključivanje. Na zaslonu se prikazuje popis programa.
2. Odaberite program. ECO 50° je uvijek osnovni program.

3. Ako želite, postavite primjenjive opcije. Kad su opcije postavljene, idite na popis programa.
4. Pritisnite **OK**.
Ako je program primjenjiv na opciju TimeManager na zaslonu će se prikazati dvije vrijednosti s odgovarajućim trajanjima programa.
 - **Brzo**: odaberite vrijednost za uključenje TimeManager i pritisnite **OK** za potvrdu.
 - **Uobičajeno**: odaberite vrijednost za isključenje TimeManager i pritisnite **OK** za potvrdu.
5. Za pokretanje programa zatvorite vrata uređaja.

Kako pokrenuti MyFavourite programe

1. Pritisnite i držite **OK** oko 3 sekunde dok s ena zaslonu ne prikaže MyFavourite program.
2. Za pokretanje programa zatvorite vrata uređaja.

Kako odgoditi početak programa

Nije moguće postaviti odgodu početka s programom MyFavourite.

1. Odaberite program.
2. Pritisnite .
Na zaslonu se prikazuje popis opcija.
3. Odaberite **Odgoda** i pritisnite **OK**.
Na zaslonu se prikazuje broj sati dostupnih za odgodu početka (od 1 do 24).
4. Odaberite željeni broj sati i za potvrdu pritisnite **OK**.
Zaslon se vraća na popis opcija.
5. Možete postaviti druge primjenjive opcije.
6. Pritišćite  dok se na zaslonu ne prikaže odabrani program.
7. Pritisnite **OK** za potvrdu odabira programa.
8. Za pokretanje odbrojavanja zatvorite vrata uređaja.

Po dovršetku odbrojavanja pokreće se program.

Poništavanje odgode početka tijekom odbrojavanja

Kad poništite odgođeni početak, program i opcije postavljeni su na njihove osnovne vrijednosti.

1. Otvorite vrata uređaja.
2. Pritisnite i zadržite  otprilike 3 sekunde. Na zaslonu se prikazuje: **Prekinuti rad?** i dvije vrijednosti.
 - **Stop**: odaberite ovu vrijednost za poništavanje odgode početka. Za potvrdu pritisnite **OK**.
 - **Nastaviti**: odaberite ovu vrijednost za nastavak odbrojavanja. Za potvrdu pritisnite **OK**. Zatvorite vrata uređaja.

Kako poništiti program u radu

1. Otvorite vrata uređaja.
2. Pritisnite i zadržite  otprilike 3 sekunde. Na zaslonu se prikazuje: **Prekinuti rad?** i dvije vrijednosti.
 - **Stop**: odaberite ovu vrijednost za poništavanje programa u tijeku. Za potvrdu pritisnite **OK**.
 - **Nastaviti**: odaberite ovu vrijednost za nastavak programa u tijeku. Za potvrdu pritisnite **OK**. Zatvorite vrata uređaja.

Prije pokretanja novog programa provjerite nalazi li se deterđžent u spremniku za deterđžent.

Otvaranje vrata dok uređaj radi

Otvaranje vrata dok je program u tijeku zaustavlja uređaj. To može utjecati na potrošnju energije i trajanje programa. Nakon zatvaranja vrata, uređaj nastavlja raditi od točke u kojoj je prekinuo rad.



Ako su vrata otvorena dulje od 30 sekundi tijekom faze sušenja, program u tijeku će se prekinuti. To se neće dogoditi ako je vrata otvorila funkcija AirDry.

Završetak programa

Kad je program završen, TimeBeam prikazuje **0:00** i **CLEAN**.

1. Pritisnite tipku za uključivanje/isključivanje ili pričekajte dok funkcija Auto Off automatski ne isključi uređaj. Ako otvorite vrata prije aktivacije Auto Off, uređaj se automatski isključuje.
2. Zatvorite slavinu.

10. SAVJETI

10.1 Općenito

Slijedite savjete ispod kako biste osigurali optimalne rezultate pranja i sušenja u svakodnevnoj upotrebi te pomoći u očuvanju okoliša.

- Veće naslage hrane s posuđa bacite u kantu za smeće.
- Ne ispirite posuđe ručno prije stavljanja u perilicu. Kad je potrebno, odaberite program s fazom predpranja.
- Uvijek upotrijebite cijeli prostor košara.
- Pazite da se predmeti u košari međusobno ne dodiruju ili ne prekrivaju. Samo tada voda može u potpunosti dosegnuti i oprati posuđe.
- Možete odvojeno upotrebljavati deterdžent za perilice posuđa, sredstvo za ispiranje i sol za perilice posuđa ili možete upotrebljavati višenamjenske tablete s deterdžentom (npr. "Sve u 1"). Slijedite upute na pakiranju.
- Odaberite program u skladu s vrstom rublja i stupnjem onečišćenja. ECO 50° nudi najučinkovitiju uporabu vode i potrošnju energije.

10.2 Upotreba soli, sredstva za ispiranje i deterdženta

- Upotrebljavajte samo sol, sredstvo za ispiranje i deterdžent za perilice posuđa. Ostali proizvodi mogu prouzročiti oštećenja na uređaju.
- Za optimalne rezultate pranja i sušenja u područjima s vrlo tvrdom vodom preporučujemo uporabu

Funkcija Auto Off

Ova funkcija smanjuje potrošnju energije automatski deaktivirajući uređaj dok ne radi.

Ta funkcije se uključuje:

- 5 minuta nakon završetka programa.
- Nakon 5 minuta ako program nije započeo.

običnog deterdženta za perilice posuđa (u prašku, gelu, tabletama bez dodatnih funkcija), sredstva za ispiranje i soli za perilice posuđa odvojeno.

- Najmanje jednom mjesečno pokrenite uređaj sa sredstvom za čišćenje koje je posebno prikladno za tu svrhu.
- Deterdžent u tabletama ne otapa se do kraja prilikom korištenja kratkih programa. Kako bi se spriječila pojava tragova deterdženta na posuđu preporučujemo upotrebu sredstva za pranje u tabletama samo za duže programe pranje.
- Nemojte koristiti više od točne količine sredstva za pranje. Pogledajte upute na pakiranju deterdženta.

10.3 Što treba napraviti kada prestanete upotrebljavati kombinirane tablete s deterdžentom

Prije nego što započnete odvojeno upotrebljavati deterdžent, sol i sredstvo za ispiranje, obavite sljedeće korake:

1. Postavite najvišu razinu omekšivača vode.
2. Provjerite jesu li spremnik za sol i spremnik sredstva za ispiranje puni.
3. Pokrenite najkraći program s fazom ispiranja. Ne dodajte deterdžent i ne puniti košare.
4. Kada program završi, podesite omekšivač vode prema tvrdoći vode u vašem području.
5. Podesite ispuštenu količinu sredstva za ispiranje.

10.4 Punjenje košara

- Uređaj koristite samo za pranje predmeta sigurnih za pranje u perilici posuđa.
- U uređaju ne perite predmete od drveta, roga, aluminija, kositra i bakra.
- Nemojte u uređaju prati predmete koji mogu apsorbirati vodu (spužve, kućanske krpe).
- Sa posuđa uklonite velike ostatke hrane.
- Prije pranja u uređaju, potopite posuđe sa zagorenim hranom u vodi.
- Stavite šuplje predmete (šalice, čaše i lonce) otvorom okrenutim prema dolje.
- Provjerite da se stakleni predmeti ne dodiruju.
- Lagano posuđe stavite u gornju košaru. Pazite da se posuđe ne može slobodno pomicati.
- Pribor za jelo i male predmete stavite u ladicu za pribor za jelo.
- Prije početka programa provjerite mogu li se mlaznice slobodno kretati.

10.5 Prije pokretanja programa

Prije pokretanja odabranog programa, uvjerite se da:

- su filtri čisti i pravilno postavljeni.
- je poklopac spremnika za sol čvrsto zatvoren.
- mlaznice nisu začepljene.
- u uređaju ima dovoljno soli za perilicu posuđa i sredstva za ispiranje (osim ako koristite višenamjenske tablete).
- je položaj predmeta u košari ispravan.
- je program prikladan za vrstu rublja i stupanj zaprljanosti.
- Upotrebljava se odgovarajuća količina deterdženta.

10.6 Pražnjenje košara

1. Ostavite posuđe da se ohladi prije nego ga izvadite iz uređaja. Vrući predmeti mogu se lako oštetiti.
2. Prvo ispraznite donju košaru, zatim gornju košaru.



Nakon završetka programa, na unutarnjim površinama uređaja još se može zadržavati voda.

11. ODRŽAVANJE I ČIŠĆENJE



UPOZORENJE!

Prije održavanja, uređaj isključite i utikač izvucite iz utičnice mrežnog napajanja.




Uvjerite se da je Comfort Lift košara prazna i zaključana u gornjem položaju.





Nečisti filtri i začepljene mlaznice smanjuju rezultate pranja. Redovno ih provjeravajte i ako je potrebno očistite ih.

11.1 Čišćenje filtara


Sustav filtra sastoji se od 3 dijela.

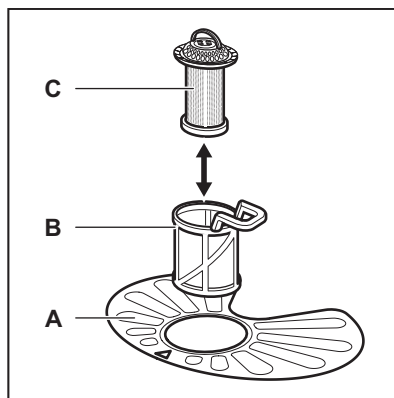


1. Okrenite filtar (B) u smjeru suprotnom od smjera kazaljke na satu i skinite ga.

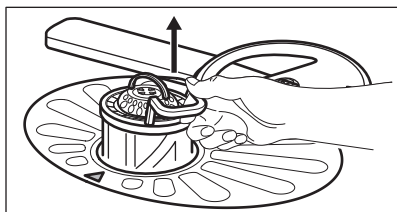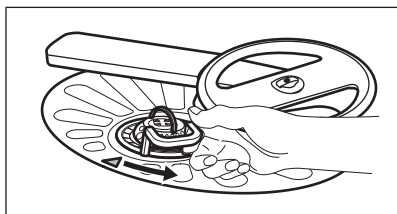


2. Izvadite filter (C) iz filtra (B).
3. Skinite plosnati filter (A).

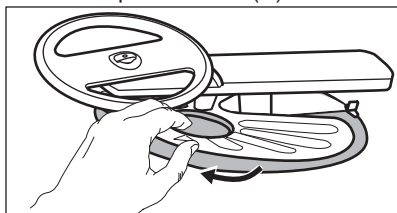


4. Operite filtre.

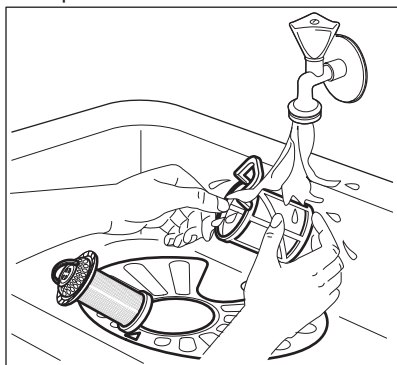

5. Provjerite da u ili oko ruba dna nema ostataka hrane ili prljavštine.
6. Vratite plosnati filter na mjesto (A). Osigurajte da je pravilno postavljen ispod 2 vodilice.

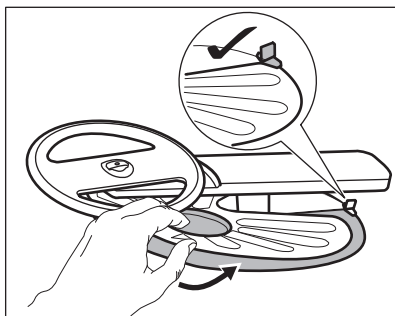

7. Sastavite filtre (B) i (C).
8. Vratite filter (B) u plosnati filter (A). Okrenite ga u smjeru kazaljki na satu dok se ne zaključa.

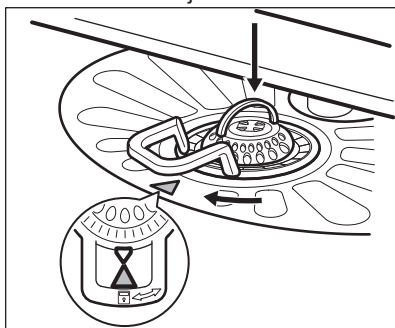

OPREZ!


Neispravan položaj filtera može uzrokovati slabe rezultate pranja i oštećenje uređaja.

11.2 Čišćenje gornje mlaznice


Preporučujemo redovito čišćenje gornje mlaznice kako bi se izbjeglo stvaranje naslaga koje će začepiti rupice.

Začepljene rupice mogu uzrokovati nezadovoljavajuće rezultate pranja.


1. Izvucite gornju košaru.
2. Za skidanje mlaznice s košare, pritisnite mlaznicu prema gore i istovremeno je okrenite u smjeru kazaljki na satu.

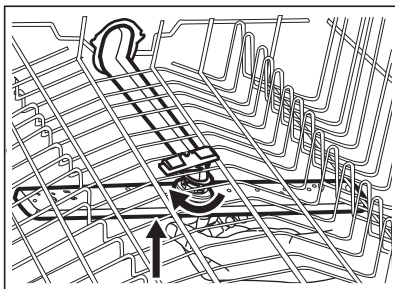

3. Mlaznicu isperite pod tekućom vodom. Za uklanjanje čestica prljavštine iz rupica upotrijebite alat sa šiljkom, npr. čačalicu.

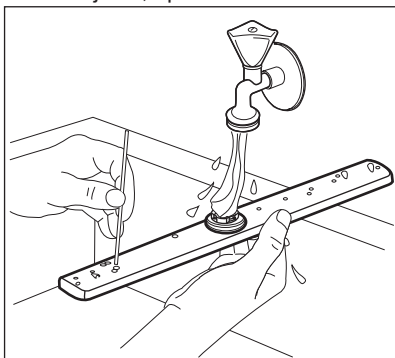

4. Za postavljanje mlaznice natrag, pritisnite mlaznicu prema gore i istovremeno je okrenite u smjeru suprotno od kazaljki na satu dok se ne zaključa.

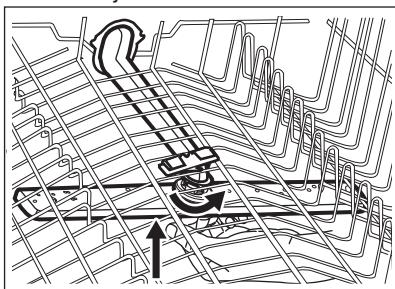

11.3 Vanjsko čišćenje

- Uređaj očistite vlažnom mekom krpom.
- Koristite isključivo neutralni deterdžent.
- Nikada ne koristite abrazivna sredstva, jastučiće za ribanje ili otapala.

11.4 Čišćenje unutrašnjosti

- Mekom i vlažnom krpom pažljivo očistite uređaj uključujući i gumenu brtvu na vratima.
- Za održavanje značajki vašeg uređaja, najmanje jednom mjesečno koristite proizvod za čišćenje posebno napravljen za perilice rublja. Pažljivo slijedite upute na pakiranju proizvoda.
- Nikada ne koristite abrazivna sredstva, čvrste alate, jake kemikalije, jastučiće za ribanje ili otapala.
- Redovita uporaba programa kratkog tavanja može uzrokovati nakupljanje masnoće i kamenca u uređaju. Najmanje dva puta mjesečno obavite program dugog trajanja kako bi se spriječilo nakupljanje.

12. RJEŠAVANJE PROBLEMA



UPOZORENJE!

Nepravilan popravak uređaja može uzrokovati opasnost za sigurnost korisnika. Sve popravke mora provoditi kvalificirano osoblje.

Pogledajte tablicu ispod za informacije o mogućim problemima.

Kod nekih kvarova na zaslonu se prikazuje poruka.

Većinu problema moguće je riješiti bez potrebe kontaktiranja ovlaštenog servisnog centra.

Problem	Mogući uzrok i rješenje
Uređaj ne možete uključiti.	• Provjerite je li kabel glavnog napajanja uključen u utičnicu. • Provjerite da u kutiji s osiguračima nema oštećenog osigurača.
Program ne započinje s radom.	• Provjerite jesu li vrata uređaja zatvorena. • Pritisnite OK. • Ako je postavljena odgoda početka, poništite postavku ili pričekajte završetak odbrojavanja. • Uređaj nadopunjava smolu u omekšivaču vode. Postupak traje približno 5 minuta.
Uređaj se ne puni vodom. Na zaslonu se prikazuje poruka: Uređaj ne puni vodu.	• Provjerite je li slavina otvorena. • Provjerite da tlak u dovodu vode nije prenizak. Ovu informaciju potražite kod lokalnog distributera vode. • Provjerite da slavina nije začepljena. • Provjerite da filter u dovodnom crijevu nije začepljen. • Provjerite da dovodno crijevo nije prignječeno ili savijeno.
Uređaj ne izbacuje vodu. Na zaslonu se prikazuje poruka: Uređaj ne prazni vodu.	• Provjerite da sifon nije začepljen. • Provjerite je li filter u odvodnom crijevu začepljen. • Provjerite je li unutarnji sustav filtra začepljen. • Provjerite je li odvodno crijevo napuknuto ili savijeno.
Uključen je uređaj za zaštitu od poplave. Na zaslonu se prikazuje poruka: Uređaj se prepunjava vodom ili postoji pogreška s ulazom vode.	• Zatvorite slavinu za vodu i obratite se ovlaštenom servisu.
Tijekom rada uređaj se više puta zaustavlja i pokreće.	• To je normalno. On osigurava optimalne rezultate čišćenja i uštedu energije.

Problem	Mogući uzrok i rješenje
Program predugo traje.	- Ako je postavljena odgoda početka, poništite postavku odgode ili pričekajte završetak odbrojavanja. - Uključite opciju TimeManager za skraćivanje trajanja programa. - Uključenje opcija može produljiti trajanje programa.
Preostalo vrijeme na zaslonu povećava se i preskače gotovo na kraj programa.	To nije kvar. Uređaj ispravno radi.
Postoji malo curenje iz vrata uređaja.	- Uređaj nije dobro niveliran. Otpustite ili pritegnite prilagodljivu nožicu (ako je primjenjivo). - Vrata uređaja nisu centrirana u unutrašnjosti. Podesite stražnju nožicu (ako je primjenjivo).
Vrata uređaja teško se zatvaraju.	- Uređaj nije dobro niveliran. Otpustite ili pritegnite prilagodljivu nožicu (ako je primjenjivo). - Dijelovi posuđa i pribora za jelo strše iz košara.
Iz uređaja se čuje zvuk kucanja.	- Posuđe i pribor za jelo u košarama nisu ispravno raspoređeni. Pogledajte letak za punjenja košara. - Pazite da se mlaznice mogu slobodno vrtjeti.
Uređaj uzrokuje iskakanje zaštitne sklopke.	- Jakost struje nije dovoljna za istodobnu opskrbu svih uređaja u upotrebi. Provjerite amperazu utičnice i kapacitet mjerača ili isključite jedan od uređaja koji radi. - Interni električni kvar uređaja. Kontaktirajte ovlašteni servisni centar.



Za druge moguće uzroke pogledajte **"Prije prve uporabe"**, **"Svakodnevna uporaba"** ili **"Savjeti"**.

Za druge poruke ili probleme koji nisu opisani u tablici, kontaktirajte ovlašteni servisni centar.

Kad ste provjerili uređaj, isključite ga pa ponovno uključite. Ako i dalje dolazi do kvara, obratite se servisnom centru.

12.1 Rezultati pranja i sušenja nisu zadovoljavajući

Problem	Mogući uzrok i rješenje
Slabi rezultati pranja.	- Pogledajte "Svakodnevna uporaba", "Savjeti i preporuke" i letak za punjenja košara. - Koristite intenzivnije programe pranja. - Očistite mlaznice i filter. Pogledajte poglavlje „Čišćenje i održavanje“.

Problem	Mogući uzrok i rješenje
Nezadovoljavajući rezultati sušenja.	• Servisi za postavljanje stola ostavljeni su predugo u uređaju. • Nema sredstva za ispiranje ili nedovoljna količina sredstva za ispiranje. Prilagodite razinu sredstva za ispiranje za neku nižu. • Plastični komadi možda će se trebati posušiti ručnikom. • Za najbolje performanse sušenja uključite XtraDry i AirDry. • Preporučujemo stalnu upotrebu sredstva za ispiranje čak i u kombinaciji s višenamjenskim tabletama.
Bijele crte i mrlje ili plavičasti slojevi na čašama i posuđu.	• Ispuštena količina sredstva za ispiranje je prevelika. Postavite razinu sredstva za ispiranje na neku nižu. • Količina deterdženta bila je prevelika.
Na čašama i posuđu ostaju mrlje i osušene kapljice vode.	• Ispuštena količina sredstva za ispiranje nije dovoljna. Prilagodite razinu sredstva za ispiranje za neku nižu. • Uzrok može biti kvaliteta sredstva za ispiranje.
Posuđe je mokro.	• Za najbolje performanse sušenja uključite XtraDry i AirDry. • Program nema fazu sušenja ili ima fazu sušenja s niskom temperaturom. • Spremnik sredstva za ispiranje je prazan. • Uzrok može biti kvaliteta sredstva za ispiranje. • Uzrok može biti kvaliteta kombiniranog deterdženta u tabletama. Isprobajte drugu marku ili aktivirajte spremnik sredstva za ispiranje i koristite sredstvo za ispiranje zajedno s kombiniranim deterdžentom u tabletama.
Unutrašnjost uređaja je mokra.	• To nije kvar uređaja. Vlažan zrak kondenzira se na stjenkama uređaja.
Tijekom pranja stvara se neobična pjena.	• Upotrebljavajte deterdžente namijenjene samo za perilice posuđa. • Curi spremnik sredstva za ispiranje. Kontaktirajte ovlašteni servisni centar.
Na jedaćem priboru nalaze se tragovi hrđe.	• U vodi za pranje previše je soli. Pogledajte poglavlje "Podešavanje omekšivača vode". • Pribor za jelo od srebra i nehrđajućeg čelika nije postavljen odvojeno. Izbjegavajte postavljanje predmeta od srebra i nehrđajućeg čelika međusobno blizu.

Problem	Mogući uzrok i rješenje
Na kraju programa postoje ostaci deterdženta u spremniku.	• Tableta s deterdžentom se zaglavila u spremniku i zato nije potpuno isprana vodom. • Voda ne može isprati deterdžent iz spremnika. Pazite da mlaznice nisu blokirane ili začepljene. • Pazite da predmeti u košarama ne sprječavaju otvaranje poklopca spremnika za deterdžent.
Unutrašnjost uređaja neugodno miriše.	• Pogledajte “Unutrašnje čišćenje”.
Naslage kamenca na posuđu i priboru za jelo, u unutrašnjosti uređaja i na unutrašnjosti vrata.	• Razina soli je niska. Nakon uključivanja uređaja provjerite postoji li na zaslonu obavijest za nadopunjavanje soli. • Poklopac spremnika za sol je labav. • Voda iz slavine je tvrda. Pogledajte poglavlje “Podešavanje omekšivača vode”. • Koristite sol i regeneraciju omekšivača vode, čak i kad se koriste višenamjenske tablete. Pogledajte poglavlje “Podešavanje omekšivača vode”. • Ako naslage kamenca ostaju, očistite uređaj sredstvima za čišćenje uređaja koja su posebno prikladna za tu svrhu. • Isprobajte drugi deterdžent. • Obratite se proizvođaču deterdženta.
Posuđe i pribor za jelo bez sjaja su, promijenjenih boja i otkrhnuti.	• Pazite da u uređaju perete samo predmete koji su prikladni za pranje u perilici posuđa. • Pažljivo punite i praznite košaru. Pogledajte letak za punjenja košara. • Osjetljive predmete stavite u gornju košaru. • Za pranje osjetljivih predmeta i staklenih predmeta, odaberite poseban program. Pogledajte “Programi”.



Za druge moguće uzroke pogledajte **“Prije prve uporabe”**, **“Svakodnevna uporaba”** ili **“Savjeti”**.

13. TEHNIČKI PODACI

Dimenzije	Širina / visina / dubina (mm)	596 / 818 - 898 / 550
Priključak na električnu mrežu ¹⁾	Napon (V)	200 - 240
	Frekvencija (Hz)	50 / 60
Tlak dovoda vode	Min. / maks. bar (MPa)	0.5 (0.05) / 8 (0.8)
Dovod vode	Hladna ili topla voda ²⁾	maks. 60 °C

Kapacitet	Broj kompleta posuđa	13
Potrošnja:	Način rada 'Left On' (W)	5.0
	Način rada Off (W)	0.10

1) Pogledajte nazivnu pločicu za ostale vrijednosti.

2) Ako topla voda dolazi iz alternativnih izvora energije (npr. solarni paneli), upotrijebite toplu vodu kako biste smanjili potrošnju energije.

14. BRIGA ZA OKOLIŠ

Reciklirajte materijale sa simbolom . Ambalažu za recikliranje odložite u prikladne spremnike. Pomozite u zaštiti okoliša i ljudskog zdravlja, kao i u recikliranju otpada od električnih i elektroničkih uređaja. Uređaje označene

simbolom  ne bacajte zajedno s kućnim otpadom. Proizvod odnesite na lokalno reciklažno mjesto ili kontaktirajte nadležnu službu.

CONTENTS

1. SAFETY INFORMATION.....	28
2. SAFETY INSTRUCTIONS.....	29
3. PRODUCT DESCRIPTION.....	31
4. CONTROL PANEL.....	32
5. PROGRAMMES.....	32
6. SETTINGS.....	34
7. OPTIONS.....	36
8. BEFORE FIRST USE.....	38
9. DAILY USE.....	40
10. HINTS AND TIPS.....	43
11. CARE AND CLEANING.....	44
12. TROUBLESHOOTING.....	47
13. TECHNICAL INFORMATION.....	50

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com/webselfservice



Register your product for better service:
www.registerelectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information

 General information and tips

 Environmental information

Subject to change without notice.

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away unless continuously supervised.
- Children of less than 3 years of age should be kept away unless continuously supervised.
- Do not let children play with the appliance.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- This appliance is intended to be used in household and similar applications such as:
 - farm houses; staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels, bed & breakfast and other residential type environments.
- Do not change the specification of this appliance.

- The operating water pressure (minimum and maximum) must be between 0.5 (0.05) / 8 (0.8) bar (MPa)
- Obey the maximum number of 13 place settings.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Put the cutlery in the cutlery basket with the sharp ends pointing down or put them in the cutlery drawer in a horizontal position with the sharp edges down.
- Do not leave the appliance with the open door unattended to avoid stepping accidentally onto it.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.
- Do not use high pressure water sprays and/or steam to clean the appliance.
- If the appliance has ventilation openings in the base, they must not be covered e.g. by a carpet.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused.

2. SAFETY INSTRUCTIONS

2.1 Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Do not install or use the appliance where the temperature is less than 0 °C.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Make sure that the appliance is installed below and adjacent to safe structures.

2.2 Electrical connection



WARNING!


Risk of fire and electric shock.

- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.

- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- This appliance complies with the E.E.C. Directives.
- UK and Ireland only. This appliance is fitted with a 13 A mains plug. If it is necessary to change the mains plug fuse, use only a 13 A ASTA (BS 1362) fuse.

2.3 Water connection

- Do not cause damage to the water hoses.
- Before connection to new pipes, pipes not used for a long time, where repair work has been carried out or new devices fitted (water meters, etc.), let the water flow until it is clean and clear.
- Ensure that there are no visible water leaks during and after the first use of the appliance.
- The water inlet hose has a safety valve and a sheath with an inner mains cable.

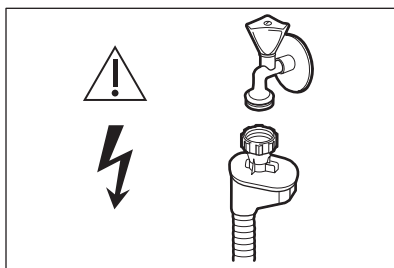

WARNING!
Dangerous voltage.

- If the water inlet hose is damaged, immediately close the water tap and disconnect the mains plug from the mains socket. Contact the Authorised Service Centre to replace the water inlet hose.

2.4 Use

- Do not sit or stand on the open door.

- Dishwasher detergents are dangerous. Obey the safety instructions on the detergent packaging.
- Do not drink and play with the water in the appliance.
- Do not remove the dishes from the appliance until the programme is complete. Some detergent may remain on the dishes.
- The appliance can release hot steam if you open the door while a programme operates.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.

2.5 Internal lighting



WARNING!
Risk of injury.

- This appliance has an internal lamp that comes on when you open the door and goes off when the door is closed.
- The type of lamp used for this appliance is for household appliances only. Do not use it for house lighting.
- To replace the internal lighting, contact the Authorised Service Centre.

2.6 Service

- To repair the appliance contact an Authorised Service Centre.
- Use original spare parts only.


2.7 Disposal



WARNING!
Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

3. PRODUCT DESCRIPTION

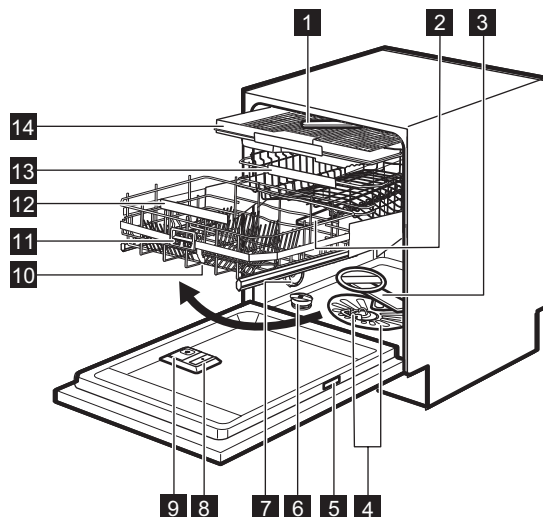


- 1** Top spray arm
- 2** Upper spray arm
- 3** Lower spray arm
- 4** Filters
- 5** Rating plate
- 6** Salt container
- 7** Air vent
- 8** Rinse aid dispenser

- 9** Detergent dispenser
- 10** Comfort Lift basket
- 11** Trigger handle
- 12** Lower basket handle
- 13** Upper basket
- 14** Cutlery drawer

3.1 TimeBeam

TimeBeam displays the following information on the floor below the appliance door:


- The programme duration when the programme begins.
- **0:00** and **CLEAN** when the programme is completed.
- **DELAY** and the countdown duration when the delay start begins.
- An alarm code when the appliance has a malfunction.

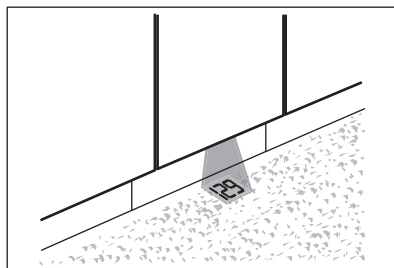



When AirDry is activated during the drying phase, the projection on the floor may not be completely visible. To check the remaining time of the running programme, look at the control panel display.

4. CONTROL PANEL

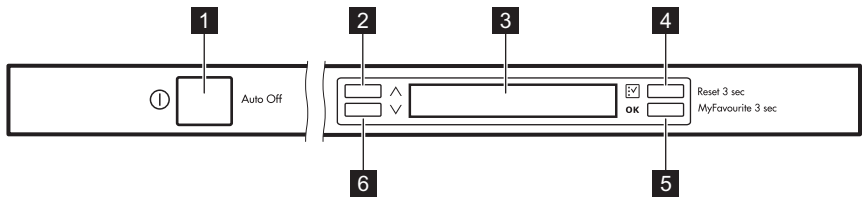

1 On/off button

2 Navigation button (up)

3 Display

4 **Options** button

5 **OK** button

6 Navigation button (down)

4.1 Button behaviour

Navigation buttons (up and down)

- Use these buttons to scroll the lists and information texts on the display.

Options button

- Short press to open the option list.
- Short press in the option list to return to the programme list.
- Short press in the settings list to return to the option list.
- Long press (3 sec.) when a delay start or a programme is running to cancel

the delay start, the programme and options. The display shows the default programme: ECO 50°.

OK button

- Short press to confirm the selection of the programme, options and settings.
- Long press (3 sec.) to start the MyFavourite programme. If no programme has been saved, the display shows: **Set MyFavourite**.

5. PROGRAMMES

Programme	Degree of soil Type of load	Programme phases	Options
ECO 50° 1)	• Normal soil • Crockery and cutlery	• Prewash • Wash 50 °C • Rinses • Dry	• XtraDry

Programme	Degree of soil Type of load	Programme phases	Options
AutoFlex 45°-70° 2)	• All • Crockery, cutlery, pots and pans	• Prewash • Wash from 45 °C to 70 °C • Rinses • Dry	• XtraDry
FlexiWash 50°-65° 3)	• Mixed soil • Crockery, cutlery, pots and pans	• Prewash • Wash 50 °C and 65 °C • Rinses • Dry	• TimeManager • XtraDry
Intensive 70° 4)	• Heavy soil • Crockery, cutlery, pots and pans	• Prewash • Wash 70 °C • Rinses • Dry	• TimeManager • XtraDry
Quick Plus 60° 5)	• Fresh soil • Crockery and cutlery	• Wash 60 °C • Rinses	• XtraDry
Glass Care 45° 6)	• Normal or light soil • Delicate crockery and glassware	• Wash 45 °C • Rinses • Dry	• XtraDry
Rinse & Hold 7)	• All	• Prewash	

1) This programme offers the most efficient use of water and energy consumption for crockery and cutlery with normal soil. This is the standard programme for test institutes.

2) The appliance senses the degree of soil and the quantity of items in the baskets. It automatically adjusts the temperature and quantity of water as well as the wash duration.

3) This programme is suitable for washing a load with mixed soil. Place items with heavy soil in the lower basket and with normal soil in the upper basket. The pressure and temperature of the water in the lower basket are higher than in the upper basket.

4) This programme is designed to wash heavily soiled items with high water pressure and at a high temperature.

5) This programme is suitable for washing a load or a half load with fresh or light soil in a short time.

6) This programme controls the temperature of the water to provide special care for delicate items, glassware in particular.

7) With this programme, you can quickly rinse off food remains from dishes and prevent odours forming in the appliance. Do not use detergent with this programme.

5.1 Consumption values

Programme 1)	Water (l)	Energy (kWh)	Duration (min)
ECO 50°	11	0.832	235

Programme ¹⁾	Water (l)	Energy (kWh)	Duration (min)
AutoFlex 45°-70°	8 - 15	0.7 - 1.7	46 - 170
FlexiWash 50°-65°	14 - 16	1.2 - 1.5	160 - 180
Intensive 70°	12.5 - 14.5	1.4 - 1.7	170 - 190
Quick Plus 60°	10	0.9	30
Glass Care 45°	12 - 14	0.8 - 1.0	82 - 92
Rinse & Hold	4	0.1	14

¹⁾ The pressure and the temperature of the water, the variations of the mains supply, the options and the quantity of dishes can change the values.

5.2 Information for test institutes

To receive the necessary information for conducting performance tests (e.g. according to EN60436), send an email to:

info.test@dishwasher-production.com

In your request please include the product number code (PNC) found on the rating plate.

For any other questions regarding your dishwasher please refer to the service book provided with your appliance.

6. SETTINGS

6.1 Setting list

Settings	Values	Description
Set MyFavourite	List of programmes	Set your favourite daily programme. Refer to specific information provided in this chapter.
AirDry	ON OFF	Set the automatic opening of the door during the drying phase. Refer to specific information provided in this chapter. Factory setting: ON.
End sound	ON OFF	Set the acoustic signal that sounds when the programme is completed. Factory setting: OFF.
Key tones	Click Beep Off	Set the sound of the buttons when pressed.
Volume	From level 1 to level 10	Adjust the sound volume.

Settings	Values	Description
Brightness	From level 0 to level 9	Adjust the brightness of the display.
Contrast	From level 0 to level 9	Adjust the contrast of the display.
Water hardness	From level 1 to level 10	Adjust the level of the water softener according to the water hardness in your area. Factory setting: level 5.
Rinse aid level	From level 0 to level 6 Level 0 = no release of rinse aid	Adjust the released quantity of the rinse aid according to the required dosage. Factory setting: level 4.
Languages	List of languages	Set the preferred language. Default language: English.
Display on floor	List of colours None	Set the colour of the Time-Beam or deactivate the TimeBeam.
Reset settings	Reset	Reset the appliance to the factory settings.

6.2 How to change a setting with 2 values (ON and OFF)

Saved settings remain valid until you change them again.

1. Press .
The display shows the option list.
2. Select **Settings** and press **OK**.
The display shows the setting list.
3. Select a setting and press **OK** to change the setting value.
 - The setting value changes from **ON** to **OFF** or vice versa.
 - The display remains in the settings list.
4. Press  repeatedly until the display shows the programme list.

6.3 How to change a setting with multiple values

Saved settings remain valid until you change them again.

1. Press .

The display shows the option list.

2. Select **Settings** and press **OK**.
The display shows the setting list.
3. Select a setting and press **OK** to enter the setting.
4. Use  and  to change the setting value.
5. Press **OK** to save the setting.
The display returns to the setting list.
6. Press  repeatedly until the display shows the programme list.

6.4 How to save the MyFavourite programme

You can save your favourite programme along with applicable options. It is not possible to save the MyFavourite programme with the Delay option.

You can save one programme at a time. A new setting cancels the previous one.

1. Press .
- The display shows the option list.

2. Select **Settings** and press **OK**.
The display shows the setting list.
3. Select **Set MyFavourite** and press **OK**.

The display shows the programme list.

4. Select a programme and press **OK**.
The display shows two values.
 - **Add option**: select the value to add an option to the programme.
 - **Done**: select the value to save the programme without options or to finish adding options to the programme.

5. Press **OK**.


If the programme is applicable to the TimeManager option, the display shows two values with corresponding programme durations.

- **Fast**: select the value to activate TimeManager.
- **Normal**: select the value to deactivate TimeManager.

6. Press **OK** to confirm.
The display confirms that the MyFavourite programme is saved.

6.5 AirDry

AirDry improves the drying results with less energy consumption.

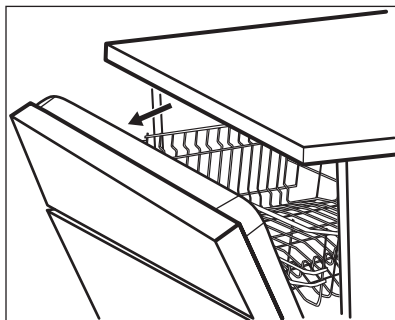

7. OPTIONS



Desired options must be activated every time before you start a programme. It is not possible to activate or deactivate options while a programme is running.



During the drying phase, the door opens automatically and remains ajar.



CAUTION!

Do not try to close the appliance door within 2 minutes after automatic opening. This can cause damage to the appliance. If, afterwards, the door is closed for another 3 minutes, the running programme ends.

AirDry is automatically activated with all programmes excluding Rinse & Hold (if applicable).

To improve the drying performance refer to the XtraDry option or activate AirDry.



CAUTION!

If children have access to the appliance, it is advised to deactivate AirDry as opening the door may pose a danger.



Activating options can affect the water and energy consumption as well as the programme duration.

7.1 Option list

Options	Values	Description
Delay	From 1 to 24 hours OFF (default value)	Delays the start of a programme.
XtraDry	ON OFF (default value)	Boosts the drying performance. Refer to specific information provided in this chapter.
TimeManager	Fast Normal (default value)	Reduces the duration of a selected programme by approximately 50%. Refer to specific information provided in this chapter.
Settings		Shows the appliance settings

7.2 How to set an option

The option list shows only the options that are applicable to the selected programme.

Not all options are compatible with each other. If you select options that are not compatible, the appliance automatically deactivates one or more of them. The display informs which options are deactivated.

When the programme is complete or cancelled, the options are set to the default values.

1. Select a programme.
2. Press .
3. Select an option.
The display shows the default option value in parenthesis.
4. Press **OK** to change the value from **OFF** to **ON** or vice versa.

If you select **Delay** and press **OK**, the display shows the number of hours available for the delay start. Select the desired delay time and press **OK** to confirm.

5. Press  repeatedly until the display shows the selected programme.

7.3 XtraDry

Activate this option to boost the drying performance.

XtraDry is a permanent option for all programmes other than ECO 50°. It is automatically activated in next cycles. This configuration can be changed at any time.



Every time ECO 50° is activated, XtraDry is off and needs to be chosen manually.

Activating XtraDry deactivates TimeManager and vice versa.

7.4 TimeManager

TimeManager allows to reduce the duration of a selected programme by approximately 50%.

This option increases the pressure and the temperature of the water. The washing and the drying phases are shorter.

The washing results are the same as with the normal programme duration. The drying results can decrease.

Activate TimeManager the following way:

Select a programme and press **OK**.

If TimeManager is applicable to the selected programme, the display shows two values with corresponding programme durations.

- **Fast:** select the value to activate TimeManager and press **OK** to confirm.

- **Normal:** select the value to deactivate TimeManager and press **OK** to confirm.

Activating TimeManager deactivates XtraDry and vice versa.

8. BEFORE FIRST USE

When you activate the appliance for the first time, you need to set the language. The default language is English.

1. Set the language.
 - Press **OK** to confirm English.
 - Select a different language and press **OK** to confirm.
2. **Make sure that the current level of the water softener agrees with the hardness of the water supply. If not, adjust the level of the water softener.**
3. Fill the salt container.
4. Fill the rinse aid dispenser.
5. Open the water tap.
6. Start a programme to remove any residuals from the manufacturing process. Do not use detergent and do not put dishes in the baskets.

After starting the programme, the appliance recharges the resin in the

water softener for up to 5 minutes. The washing phase starts only after this procedure is complete. The procedure is repeated periodically.

8.1 The water softener

The water softener removes minerals from the water supply, which would have a negative effect on the washing results and on the appliance.

The higher the content of these minerals, the harder your water is. Water hardness is measured in equivalent scales.

The water softener should be adjusted according to the hardness of the water in your area. Your local water authority can advise you on the hardness of the water in your area. It is important to set the right level of the water softener to assure good washing results.

Water hardness

German degrees (°dH)	French degrees (°fH)	mmol/l	Clarke degrees	Water softener level
47 - 50	84 - 90	8.4 - 9.0	58 - 63	10
43 - 46	76 - 83	7.6 - 8.3	53 - 57	9
37 - 42	65 - 75	6.5 - 7.5	46 - 52	8
29 - 36	51 - 64	5.1 - 6.4	36 - 45	7
23 - 28	40 - 50	4.0 - 5.0	28 - 35	6
19 - 22	33 - 39	3.3 - 3.9	23 - 27	5 ¹⁾
15 - 18	26 - 32	2.6 - 3.2	18 - 22	4
11 - 14	19 - 25	1.9 - 2.5	13 - 17	3
4 - 10	7 - 18	0.7 - 1.8	5 - 12	2

German de- grees (°dH)	French de- grees (°fH)	mmol/l	Clarke de- grees	Water softener level
<4	<7	<0.7	< 5	1 2)

1) Factory setting.

2) Do not use salt at this level.

Regardless of the type of detergent used, set the proper water hardness level to keep the salt refill notification active.

i Multi-tabs containing salt are not effective enough to soften hard water.

8.2 The salt container



CAUTION!

Use rough salt designed for dishwashers only. Fine salt increases the risk of corrosion.


The salt is used to recharge the resin in the water softener and to assure good washing results in daily use.

How to fill the salt container




Make sure that the Comfort Lift basket is empty and locked in the raised position.

1. Turn the cap of the salt container counterclockwise and remove it.
2. Put 1 litre of water in the salt container (only for the first time).
3. Fill the salt container with dishwasher salt (until it is full).

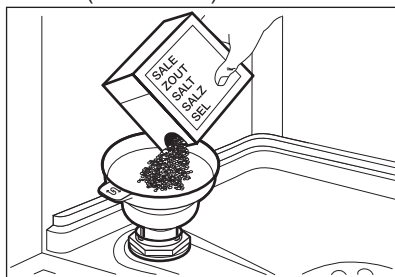

4. Carefully shake the funnel by its handle to get the last granules inside.
5. Remove the salt around the opening of the salt container.

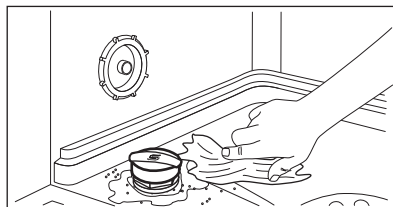

6. Turn the cap of the salt container clockwise to close the salt container.



CAUTION!

Water and salt can come out of the salt container when you fill it. After you fill the salt container, immediately start a programme to prevent corrosion.




When the salt container needs refilling, the display shows the related message.

8.3 The rinse aid dispenser

The rinse aid helps to dry the dishes without streaks and stains.

The rinse aid is automatically released during the hot rinse phase.

How to fill the rinse aid dispenser

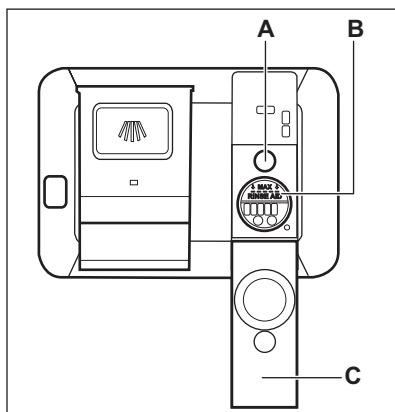

CAUTION!

Only use rinse aid designed specifically for dishwashers.

1. Open the lid (C).
2. Fill the dispenser (B) until the rinse aid reaches the marking "MAX".

3. Remove the spilled rinse aid with an absorbent cloth to prevent excessive foam formation.
4. Close the lid. Make sure that the lid locks into position.



Fill the rinse aid dispenser when the indicator (A) is clear.



When the rinse aid dispenser needs refilling, the display shows the related message.

If you use multi-tablets and the drying performance is satisfactory, the message about refilling the dispenser can be disabled by setting the rinse aid level to 0.



We recommend to always use rinse aid for better drying performance, also in combination with multi-tablets containing rinsing agent.

9. DAILY USE

1. Open the water tap.
2. Press the on/off button to activate the appliance.
 - Fill the salt container if the display shows the related message.
 - Fill the rinse aid dispenser if the display shows the related message.
3. Load the baskets.
4. Add the detergent.
5. Set and start a programme suitable for the type of load and the degree of soil.

9.1 Comfort Lift



CAUTION!

Do not sit on the rack or put excessive pressure on the locked basket.



CAUTION!

Do not exceed the max load capacity of 18 kg.




CAUTION!

Make sure that items do not stick out of the basket frame as it can cause damage to the items and the Comfort Lift mechanism.

The Comfort Lift mechanism allows to lift the lower rack up (to the second rack level) and put it down to load and unload dishes easily.


To load or unload the lower basket:

1. Lift the basket by pulling the rack out of the dishwasher by the basket handle. The trigger handle should not be used.

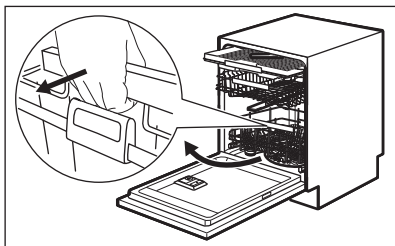

The basket is automatically locked on the upper level.

2. Carefully place items in the basket or remove them (refer to **Basket loading leaflet**).
3. Lower the basket by connecting the trigger handle with the basket frame as shown below. Lift the trigger handle completely and the basket trigger handle slightly until the basket is disengaged on both sides.

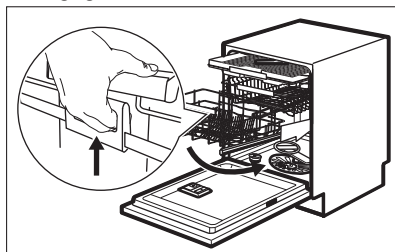


Once the basket is unlocked, push the rack down. The mechanism returns to its default position on the lower level.

There are two ways of lowering the basket depending on the loading:

- If there is a full load of plates, slightly push the basket down.
- If the basket is empty or half-loaded, press the basket down.

9.2 Using the detergent

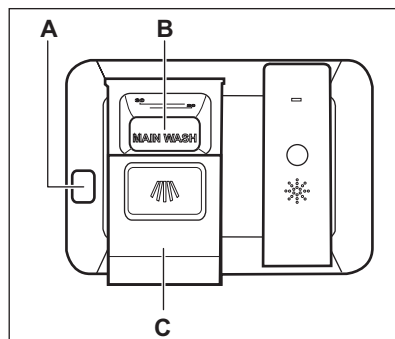

CAUTION!

Only use detergent specifically designed for dishwashers.

1. Press the release button (A) to open the lid (C).
2. Put the detergent, in powder or tablets, in the compartment (B).
3. If the programme has a prewash phase, put a small quantity of detergent on the inner part of the appliance door.
4. Close the lid. Make sure that the lid locks into position.

9.3 Setting and starting a programme

How to start a programme

1. Press the on/off button to activate the appliance.
The display shows the programme list.
2. Select a programme. ECO 50° is always the default programme.
3. Set applicable options if desired.
Once you set options, return to the programme list.
4. Press **OK**.

If the programme is applicable to the TimeManager option, the display shows two values with corresponding programme durations.

- **Fast:** select the value to activate TimeManager and press **OK** to confirm.
 - **Normal:** select the value to deactivate TimeManager and press **OK** to confirm.
5. Close the appliance door to start the programme.

How to start the MyFavourite programme

1. Press and hold **OK** for about 3 seconds until the display shows the MyFavourite programme.
2. Close the appliance door to start the programme.

How to delay the start of a programme

It is not possible to set the delay start of the MyFavourite programme.

1. Select a programme.
2. Press .
The display shows the option list.
3. Select **Delay** and press **OK**.
The display shows the number of hours available for the delay start (from 1 to 24).
4. Select the desired number of hours and press **OK** to confirm.
The display returns to the option list.
5. You can set other applicable options.
6. Press  repeatedly until the display shows the selected programme.
7. Press **OK** to confirm the programme selection.
8. Close the appliance door to start the countdown.

When the countdown is completed, the programme starts.

How to cancel the delay start while the countdown operates

The programme and options are set to their default values when you cancel the delay start.

1. Open the appliance door.
2. Press and hold  for about 3 seconds. The display shows: **Stop washing?** and two values.
 - **Stop:** select the value to cancel the delay start. Press **OK** to confirm.
 - **Resume:** select the value to resume the countdown. Press **OK** to confirm. Close the appliance door.

How to cancel the running programme

1. Open the appliance door.
2. Press and hold  for about 3 seconds. The display shows: **Stop washing?** and two values.
 - **Stop:** select the value to cancel the running programme. Press **OK** to confirm.
 - **Resume:** select the value to resume the running programme.
Press **OK** to confirm. Close the appliance door.

Make sure that there is detergent in the detergent dispenser before you start a new programme.

Opening the door while the appliance operates

Opening the door while a programme is running stops the appliance. It may affect the energy consumption and the programme duration. After closing the door, the appliance continues from the point of interruption.



If the door is opened for more than 30 seconds during the drying phase, the running programme ends. It does not happen if the door is opened by AirDry function.

End of the programme

When the programme is complete, the TimeBeam displays **0:00** and **CLEAN**.

1. Press the on/off button or wait for the Auto Off function to automatically deactivate the appliance. If you open the door before the activation of Auto Off, the appliance is automatically deactivated.
2. Close the water tap.

The Auto Off function

This function decreases energy consumption by deactivating

automatically the appliance when it is not operating.

The function comes into operation:

- 5 minutes after the completion of the programme.
- After 5 minutes if the programme has not started.

10. HINTS AND TIPS

10.1 General

Follow the hints below to ensure optimal cleaning and drying results in daily use and to help you protect the environment.

- Remove larger residues of food from the dishes into the waste bin.
- Do not pre-rinse dishes by hand. When needed, select a programme with a prewash phase.
- Always use the whole space of the baskets.
- Make sure that items in the baskets do not touch or cover each other. Only then can the water completely reach and wash the dishes.
- You can use dishwasher detergent, rinse aid and salt separately or you can use the multi-tablets (e.g. "All in 1"). Follow the instructions on the packaging.
- Select a programme according to the type of load and the degree of soil. ECO 50° offers the most efficient use of water and energy consumption.

10.2 Using salt, rinse aid and detergent

- Only use salt, rinse aid and detergent for dishwasher. Other products can cause damage to the appliance.
- In areas with hard and very hard water we recommend to use plain dishwasher detergent (powder, gel,

tablets containing no additional agents), rinse aid and salt separately for optimal cleaning and drying results.

- At least once a month run the appliance with the use of appliance cleaner which is particularly suitable for this purpose.
- Detergent tablets do not fully dissolve with short programmes. To prevent detergent residues on the tableware, we recommend that you use the tablets with long programmes.
- Do not use more than the correct quantity of detergent. Refer to the instructions on the detergent packaging.

10.3 What to do if you want to stop using multi-tablets

Before you start to use separately detergent, salt and rinse aid, complete the following steps:

1. Set the highest level of the water softener.
2. Make sure that the salt and rinse aid containers are full.
3. Start the shortest programme with a rinsing phase. Do not add detergent and do not load the baskets.
4. When the programme is completed, adjust the water softener according to the water hardness in your area.

5. Adjust the released quantity of rinse aid.

10.4 Loading the baskets

- Use the appliance to wash dishwasher-safe items only.
- Do not wash in the appliance items made of wood, horn, aluminium, pewter and copper.
- Do not wash in the appliance items that can absorb water (sponges, household cloths).
- Remove large food residues from dishes.
- Soak cookware with burnt-on food before washing it in the appliance.
- Put hollow items (cups, glasses and pans) with the opening facing downwards.
- Make sure that glasses do not touch each other.
- Put light items in the upper basket. Make sure that the items do not move freely.
- Put cutlery and small items in the cutlery drawer.
- Make sure that the spray arms can move freely before you start a programme.

10.5 Before starting a programme

Before you start the selected programme, make sure that:

- The filters are clean and correctly installed.
- The cap of the salt container is tight.
- The spray arms are not clogged.
- There is enough salt and rinse aid (unless you use multi-tablets).
- The arrangement of the items in the baskets is correct.
- The programme is suitable to the type of load and the degree of soil.
- The correct quantity of detergent is used.

10.6 Unloading the baskets

1. Let the tableware cool down before you remove it from the appliance. Hot items can be easily damaged.
2. First remove items from the lower basket, then from the upper basket.



After the programme is completed, water can still remain on the inside surfaces of the appliance.

11. CARE AND CLEANING



WARNING!

Before maintenance, deactivate the appliance and disconnect the mains plug from the main socket.




Make sure that the Comfort Lift basket is empty and locked in the raised position.




Dirty filters and clogged spray arms decrease the washing results. Make a check regularly and, if necessary, clean them.

11.1 Cleaning the filters


The filter system is made of 3 parts.

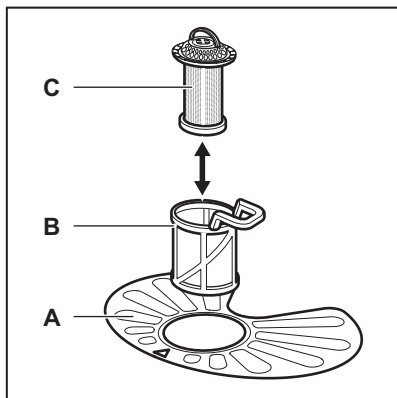


1. Turn the filter (B) counterclockwise and remove it.

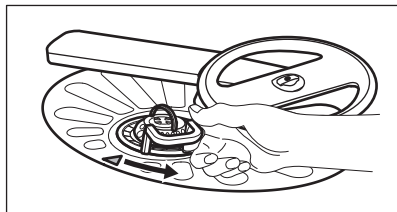


2. Remove the filter (C) out of filter (B).
3. Remove the flat filter (A).

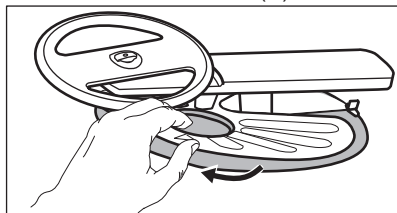


4. Wash the filters.

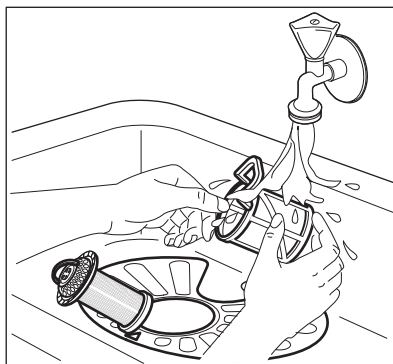

5. Make sure that there are no residues of food or soil in or around the edge of the sump.
6. Put back in place the flat filter (A). Make sure that it is correctly positioned under the 2 guides.

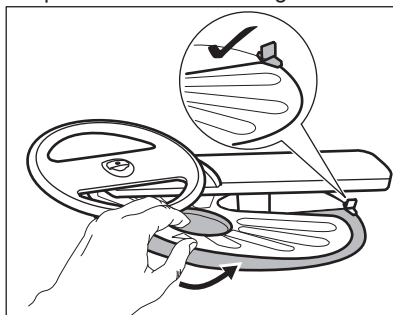

7. Reassemble the filters (B) and (C).
8. Put back the filter (B) in the flat filter (A). Turn it clockwise until it locks.

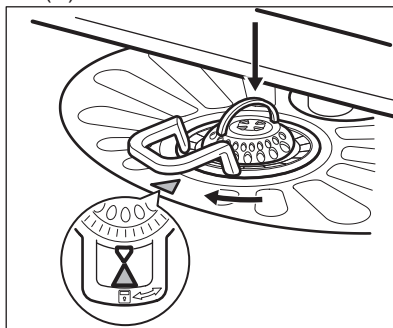

CAUTION!


An incorrect position of the filters can cause bad washing results and damage to the appliance.

11.2 Cleaning the upper spray arm


We recommend to clean the upper spray arm regularly to prevent soil from clogging the holes.

Clogged holes can cause unsatisfactory washing results.

1. Pull out the upper basket.
2. To detach the spray arm from the basket, press the spray arm upwards and simultaneously turn it clockwise.

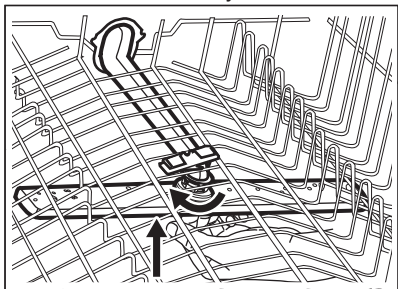


3. Wash the spray arm under running water. Use a thin pointed tool, e.g. a toothpick, to remove particles of soil from the holes.

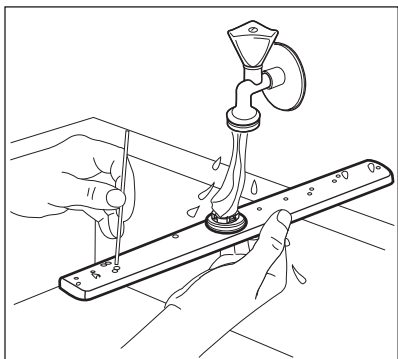

4. To install the spray arm back, press the spray arm upwards and

simultaneously turn it counterclockwise until it locks into place.

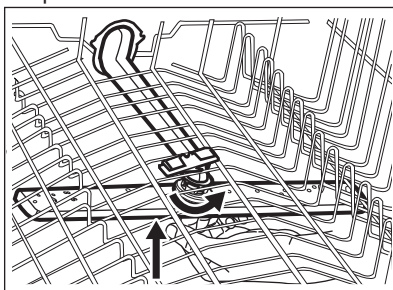

11.3 External cleaning

- Clean the appliance with a moist soft cloth.
- Only use neutral detergents.
- Do not use abrasive products, abrasive cleaning pads or solvents.

11.4 Internal cleaning

- Carefully clean the appliance, including the rubber gasket of the door, with a soft damp cloth.
- To maintain the performance of your appliance, use a cleaning product designed specifically for dishwashers at least once a month. Carefully follow the instructions on the packaging of the product.
- Do not use abrasive products, abrasive cleaning pads, sharp tools, strong chemicals, scourer or solvents.
- Using short-duration programmes regularly can cause grease and limescale buildup inside the appliance. Run long-duration programmes at least twice a month to prevent the buildup.

12. TROUBLESHOOTING



WARNING!

Improper repair of the appliance may pose a danger to the safety of the user. Any repairs must be performed by qualified personnel.

to contact an Authorised Service Centre.

Refer to the below table for information on possible problems.

With some problems, the display shows a message.

The majority of problems that may occur can be solved without the need

Problem	Possible cause and solution
You cannot activate the appliance.	• Make sure that the mains plug is connected to the mains socket. • Make sure that there is no damaged fuse in the fuse box.
The programme does not start.	• Make sure that the appliance door is closed. • Press OK. • If the delay start is set, cancel the setting or wait for the end of the countdown. • The appliance recharges the resin inside the water softener. The duration of the procedure is approximately 5 minutes.
The appliance does not fill with water. The display shows the message: Appliance is not filling water.	• Make sure that the water tap is open. • Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority. • Make sure that the water tap is not clogged. • Make sure that the filter in the inlet hose is not clogged. • Make sure that the inlet hose has no kinks or bends.
The appliance does not drain the water. The display shows the message: Appliance is not draining water.	• Make sure that the sink spigot is not clogged. • Make sure that the filter in the outlet hose is not clogged. • Make sure that the interior filter system is not clogged. • Make sure that the drain hose has no kinks or bends.
The anti-flood device is on. The display shows the message: Appliance is flooding or has an error in the water inlet.	• Close the water tap and contact an Authorised Service Centre.
The appliance stops and starts more times during operation.	• It is normal. It provides optimal cleaning results and energy savings.

Problem	Possible cause and solution
The programme lasts too long.	• If the delay start is set, cancel the delay setting or wait for the end of the countdown. • Activate the TimeManager option to reduce the programme duration. • Activating options can increase the programme duration.
The remaining time in the display increases and skips nearly to the end of the programme duration.	• This is not a defect. The appliance is working correctly.
Small leak from the appliance door.	• The appliance is not levelled. Loosen or tighten the adjustable feet (if applicable). • The appliance door is not centred on the tub. Adjust the rear foot (if applicable).
The appliance door is difficult to close.	• The appliance is not levelled. Loosen or tighten the adjustable feet (if applicable). • Parts of the tableware are protruding from the baskets.
Rattling or knocking sounds from the inside of the appliance.	• The tableware is not properly arranged in the baskets. Refer to basket loading leaflet. • Make sure that the spray arms can rotate freely.
The appliance trips the circuit-breaker.	• The amperage is insufficient to supply simultaneously all the appliances in use. Check the socket amperage and the capacity of the meter or turn off one of the appliances in use. • Internal electrical fault of the appliance. Contact an Authorised Service Centre.



Refer to **"Before first use"**, **"Daily use"**, or **"Hints and tips"** for other possible causes.

the problem occurs again, contact an Authorised Service Centre.

For other messages or problems not described in the table, contact an Authorised Service Centre.

Once you have checked the appliance, deactivate and activate the appliance. If

12.1 The washing and drying results are not satisfactory

Problem	Possible cause and solution
Poor washing results.	• Refer to "Daily use", "Hints and tips" and the basket loading leaflet. • Use more intensive washing programmes. • Clean spray arm jets and the filter. Refer to "Care and Cleaning".

Problem	Possible cause and solution
Poor drying results.	- Tableware has been left for too long inside the closed appliance. - There is no rinse aid or the dosage of rinse aid is not sufficient. Adjust the rinse aid level to a higher level. - Plastic items may need to be towel dried. - For the best drying performance, activate XtraDry and AirDry. - We recommend to always use rinse aid, even in combination with multi-tablets.
There are whitish streaks or bluish layers on glasses and dishes.	- The released quantity of rinse aid is too high. Adjust the rinse aid level to a lower level. - The quantity of detergent is too high.
There are stains and dry water drops on glasses and dishes.	- The released quantity of rinse aid is not sufficient. Adjust the rinse aid level to a higher level. - The quality of the rinse aid can be the cause.
The dishes are wet.	- For the best drying performance, activate XtraDry and AirDry . - The programme does not have a drying phase or has a drying phase with low temperature. - The rinse aid dispenser is empty. - The quality of the rinse aid can be the cause. - The quality of the multi-tablets can be the cause. Try a different brand or activate the rinse aid dispenser and use rinse aid and multi-tablets together.
The interior of the appliance is wet.	This is not a defect of the appliance. Humid air condensates on the appliance walls.
Unusual foam during washing.	- Use the detergent designed specifically for dishwashers. - There is a leak in the rinse aid dispenser. Contact an Authorised Service Centre.
Traces of rust on cutlery.	- There is too much salt in the water used for washing. Refer to "The water softener". - Silver and stainless steel cutlery were placed together. Avoid putting silver and stainless steel items close together.
There are residues of detergent in the dispenser at the end of the programme.	- The detergent tablet got stuck in the dispenser and was not completely washed away by water. - Water cannot wash away the detergent from the dispenser. Make sure that the spray arm is not blocked or clogged. - Make sure that items in the baskets do not impede the lid of the detergent dispenser from opening.
Odours inside the appliance.	Refer to "Internal cleaning".

Problem	Possible cause and solution
Limescale deposits on the tableware, on the tub and on the inside of the door.	• The level of salt is low. After you activate the appliance, check the display for the salt refill notification. • The cap of the salt container is loose. • Your tap water is hard. Refer to "The water softener". • Use salt and set regeneration of the water softener even when multi-functional tablets are used. Refer to "The water softener". • If lime scale deposits still remain, clean the appliance with appliance cleaners which are particularly suitable for this purpose. • Try a different detergent. • Contact the detergent manufacturer.
Dull, discoloured or chipped tableware.	• Make sure that only dishwasher-safe items are washed in the appliance. • Load and unload the basket carefully. Refer to basket loading leaflet. • Place delicate items in the upper basket. • For washing delicate items and glassware, select the dedicated programme. Refer to "Programmes".



Refer to **"Before first use"**, **"Daily use"** or **"Hints and tips"** for other possible causes.

13. TECHNICAL INFORMATION

Dimensions	Width / height / depth (mm)	596 / 818 - 898 / 550
Electrical connection ¹⁾	Voltage (V)	200 - 240
	Frequency (Hz)	50 / 60
Water supply pressure	Min. / max. bar (MPa)	0.5 (0.05) / 8 (0.8)
Water supply	Cold water or hot water ²⁾	max 60 °C
Capacity	Place settings	13
Power consumption	Left-on mode (W)	5.0
	Off-mode (W)	0.10

¹⁾ Refer to the rating plate for other values.

²⁾ If the hot water comes from alternative source of energy (e.g. solar panels), use the hot water supply to decrease energy consumption.

14. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol .
Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.electrolux.com/shop



117870030-A-212018

