Hoods that work with the function				
Model of the hood	Product number code (PNC)	Model of the hood	Product number code (PNC)	
X79283MG0	942 492 556	X69454MD10	942 492 814	
DL8590-M	942 492 488	X79263MK10	942 492 816	
X69453MV01	942 492 748	X79264MD10	942 490 424	
X69453BV03	942 492 750	DL8560-M	942 492 489	
X81284WG0	942 492 760	X86264MG1	942 492 841	
X89463MD02	942 492 754	X69453MV01	942 492 768	
X69453MD02	942 492 752	X69454MV00	942 492 848	
X79263MK1	942 492 755	X69453BV03	942 492 769	
DD8694-M	942 492 478	X69454BV01	942 492 849	
X79263MV1	942 490 371	X69453MD02	942 492 771	
X792263MG0	942 492 824	X69454MD10	942 492 850	
X78264MG10	942 492 818	X76263MK1	942 492 756	
X69454MV00	942 492 820	X76263MK10	942 492 817	
X69454BV01	942 492 844	EFG60563OX	942 492 866	
X812264MG0	942 492 815	EFG90563OX	942 492 865	

## Hob<sup>2</sup>Hood

It is an advanced automatic function which connects the hob to a special hood. Both the hob and the hood have an infra — red signal communicator. Speed of the fan is defined automatically on basis of mode setting and temperature of the hottest cookware on the hob. You can also operate the fan from the hob manually.




For most of the hoods the remote system is originally deactivated. Activate it before you use the function.




When you operate the appliance with the function:


- Protect the hood panel from direct sunlight.
- Do not spot halogen light on the hood panel.
- Do not cover the hob panel. (eg. hand or pan handle)

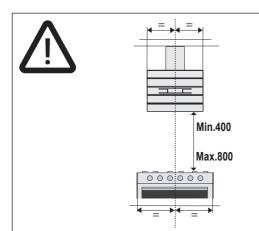


Model of the hood	Product number code (PNC)
X69453MV01	942 492 748
X69453BV03	942 492 750
X69454MV00	942 492 820
X69454BV01	942 492 844
X69453MV01	942 492 768
X69453BV03	942 492 769
X69454MV00	942 492 848
X69454BV01	942 492 849

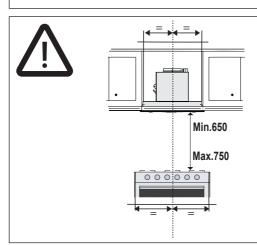


Model of the hood	Product number code (PNC)
DL8590-M	942 492 488
DL8560-M	942 492 489
X78264MG10	942 492 818
X86264MG1	942 492 841
EFG60563OX	942 492 866
EFG90563OX	942 492 865

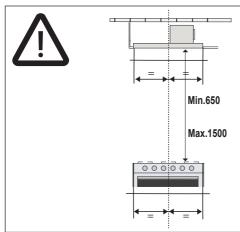


Model of the hood	Product number code (PNC)
X79283MG0	942 492 556
X81284WG0	942 492 760
X792263MG0	942 492 824
X812264MG0	942 492 815

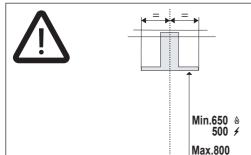

Model of the hood	Product number code (PNC)
X79263MK1	942 492 755
X89463MD02	942 492 754
X69453MD02	942 492 752
X69453MD02	942 492 771
X69454MD10	942 492 850
X79263MK10	942 492 816
X69454MD10	942 492 814
X76263MK1	942 492 756
X76263MK10	942 492 817

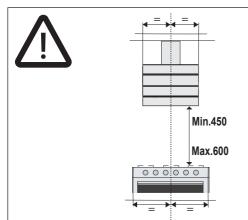

Model of the hood	Product number code (PNC)
DD8694-M	942 492 478

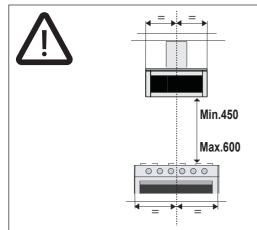



Model of the hood	Product number code (PNC)
X79263MV1	942 490 371
X79264MD10	942 490 424

## RECEIVER ACTIVATION



 Model of the hood	Product number code (PNC)
X79283MG0	942 492 556
X81284WG0	942 492 760
DL8590-M	942 492 488
X792263MG0	942 492 824
X812264MG0	942 492 815
X78264MG10	942 492 818
DL8560-M	942 492 489
X86264MG1	942 492 841
EFG60563OX	942 492 866
EFG90563OX	942 492 865

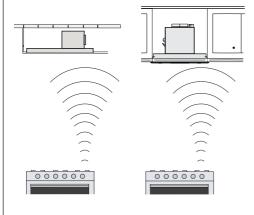





## T4 Press and hold for 3 seconds to enable the remote control, indicated by the LED flashing twice. Press and hold for 3 seconds to disable the remote control, indicated by the LED flashing just once.

These models are supplied with the sensor already activated



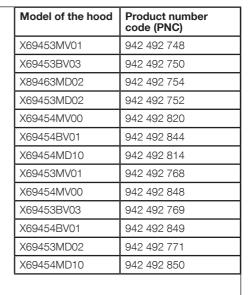

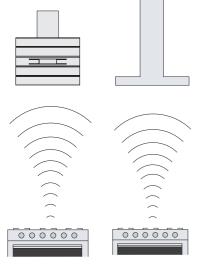


٨	①	V <sub>1</sub>	₩2	¥3	¥	€}	F C
A	 B	C	 D	 E	 F	 G	H

Button	Function	Led
G	If pressed and held	
	for 5 seconds with	
	the hood and light-	
	turned off and no	
	alarm, do:	2 Flashes Led
	Enables the Remote	buttom C + B
	control.	
	Disables the Remote	1 Flash Led
	control.	buttom C + B



Model of the hood	Product number code (PNC)
X79263MK1	942 492 755
DD8694-M	942 492 478
X79263MV1	942 490 371
X79263MK10	942 492 816
X79264MD10	942 490 424
X76263MK1	942 492 756
X76263MK10	942 492 817

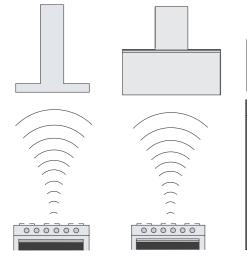



Button	Function	
A	If pressed and held for 5 seconds with the hood and light- turned off and no alarm, do: Enables the Re-	Display "IR" and
	mote control.	the Dot flashing twice
	Disables the Remote control.	Display "IR" and the Dot flashing just once

